


Batwing 180 Freestanding Awning

32147

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

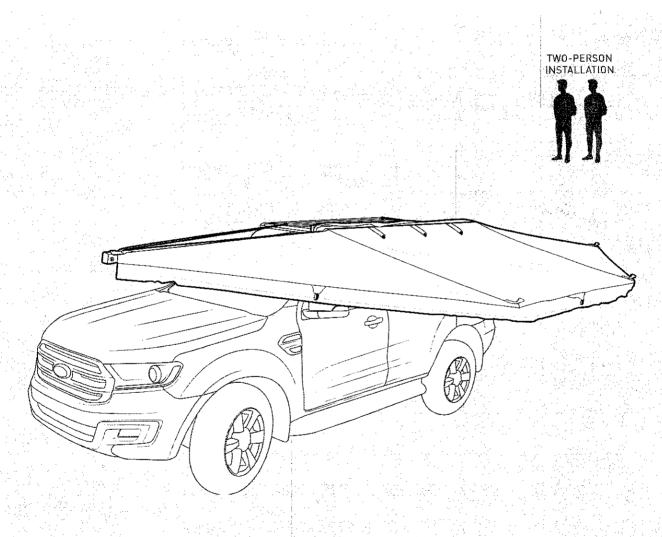

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.

For peace of mind register your product by heading to rhinorack.com/register

Rhino-Rack AUSTRALIA


22A Hanson Pl. Eastern Creek, NSW, 2766

Rhino-Rack USA

Unit D, 2450 Airport Blvd, Aurora, CO, 80011 RHINORACK.COM

Document No: 520-RFI-00209 Issue No: 01

Issue Date: 6/12/2024

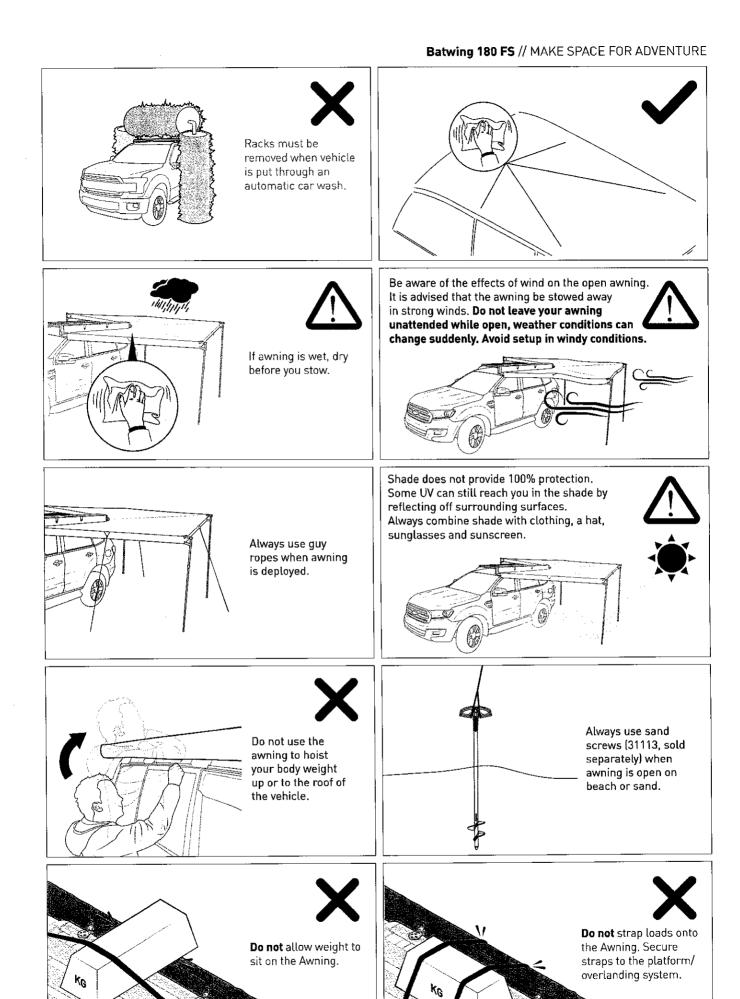

Page 2 of 24

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Batwing Awning and crossbars when putting vehicle through an automatic car wash.

 
Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible following the instruction on page 9.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Load Ratings


With the addition of the Batwing Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Batwing Awning with mounting brackets weighs approximately 20kg.

Note for Dealers and Fitters


It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Critical Dimensions



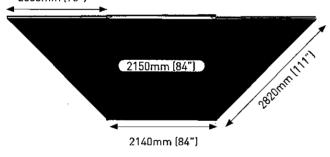

OPEN

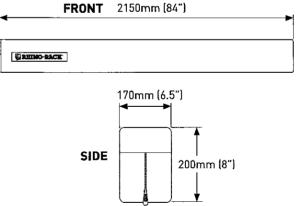


CLOSED

CONTENTS

Installation onto:

Pioneer Platforms	Steps 1 - 5 and 10 - 16
Reconn-Deck Bars	Steps 9 and 10 - 16
VA Crossbars	Steps 6 and 10 - 16
Sportz	Steps 8 and 10 - 16
Operation ————	Steps 17 - 26
Storage ————	Steps 27 - 30
Accessories	Steps 31 - 32
Page 3 of 24	

Parts List

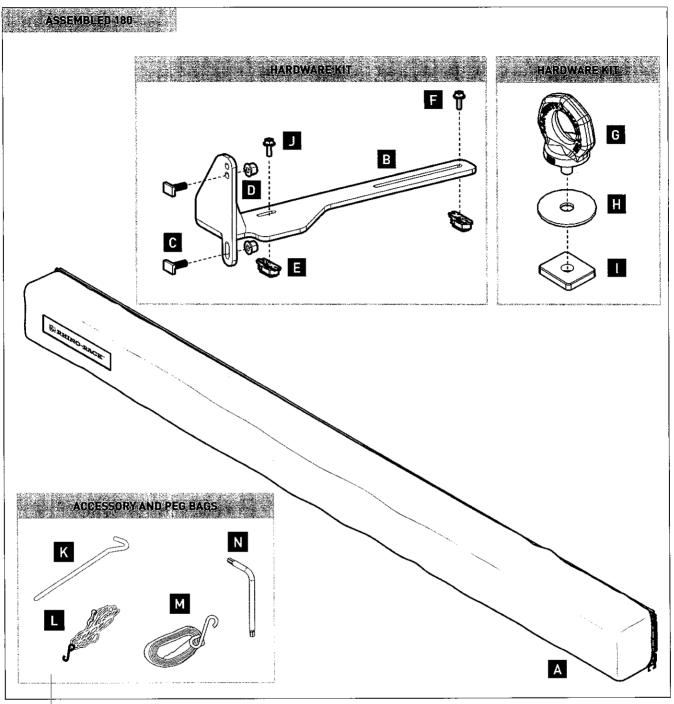

∗ltem. A	ASSEMBLED 270	Oty 1
Item	HARDWARE KITS	Oty
В	Base Bracket	2
С	M8 T-Bolt	4
D	M8 Flanged Nyloc Nut	4
E	Zwifloc Drop-In Nut	6
F	M6x16mm Hex Head Flanged Bolt	4
G	Eye Bolt	2
Н	Flat Washer	2
	Square Nut	6
J	M6 x 12mm Hex Head Flanged Bolt	4

ltem.	ACCESSORY + PEG BAGS.	Oty.
K	Awning Peg	7
L	Guy Rope (Blue)	7
М	Awning Straps (Black)	2
N	Torx Key (<i>T30</i>)	1


TOOLS REQUIRED:

T1 - 10mm & 13mm Spanner (or Socket wrench)

T2 - Tape Measure


T3 - Step Ladder

T4 - Hammer/mallet

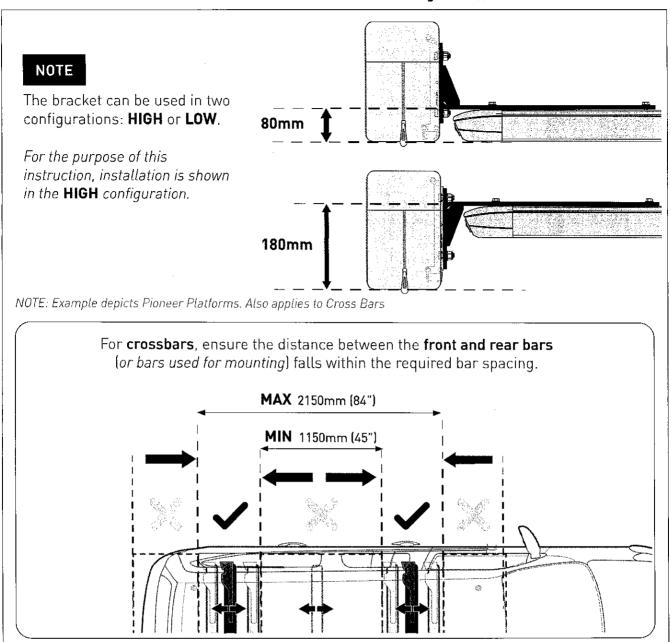



For Installation onto PIONEER PLATFORMS


(For Crossbars, skip to Step 6)

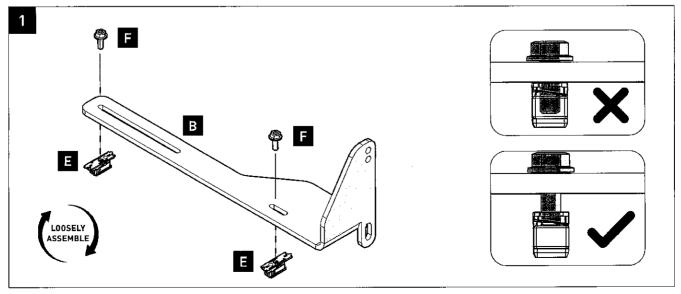


Page 5 of 24

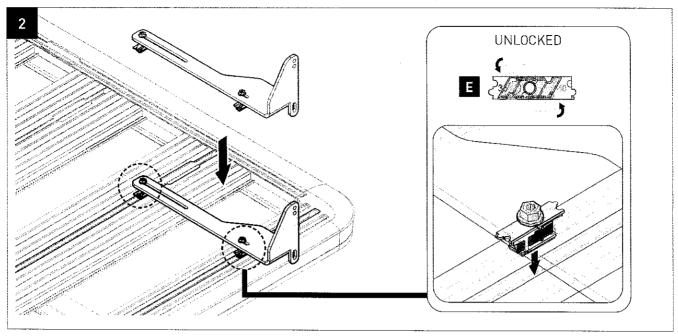

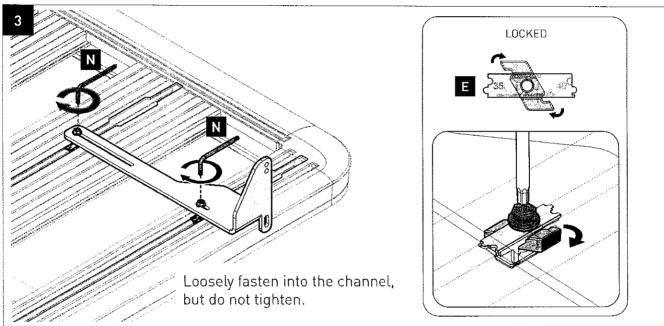

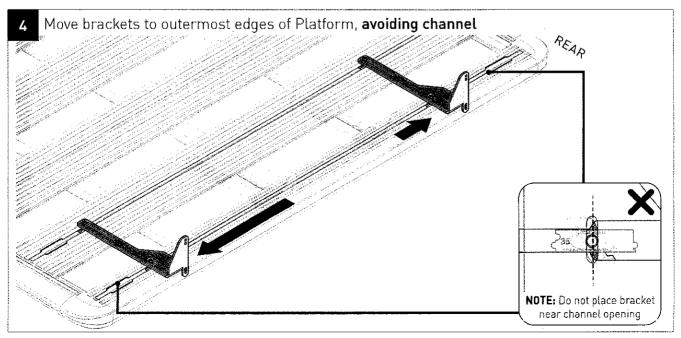


Page 6 of 24

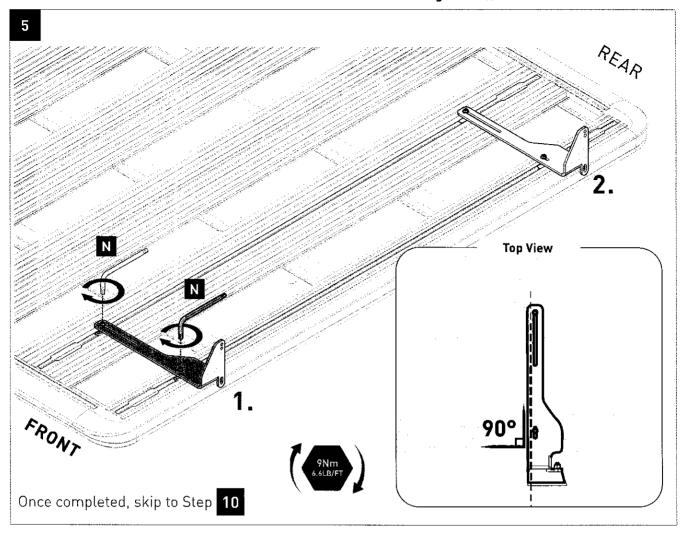


FOR INSTALLATION ONTO CROSSBARS


[For Platforms skip to Step 10]

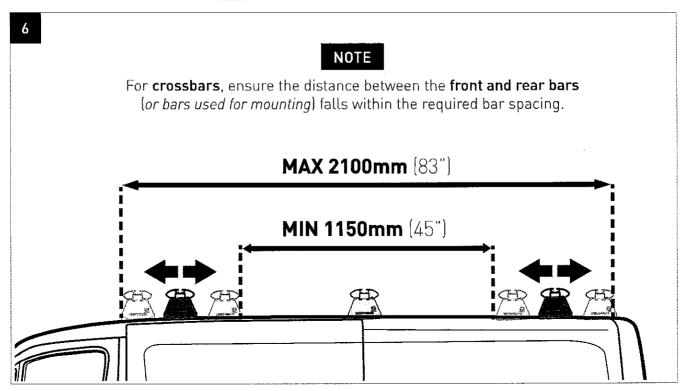


Page 7 of 24

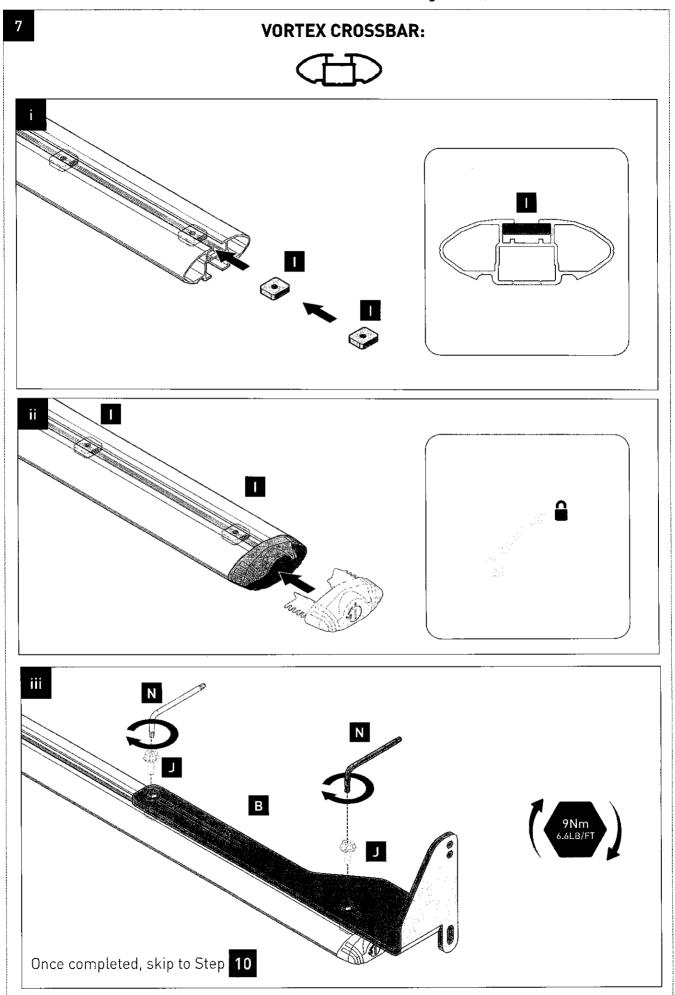

Page 8 of 24

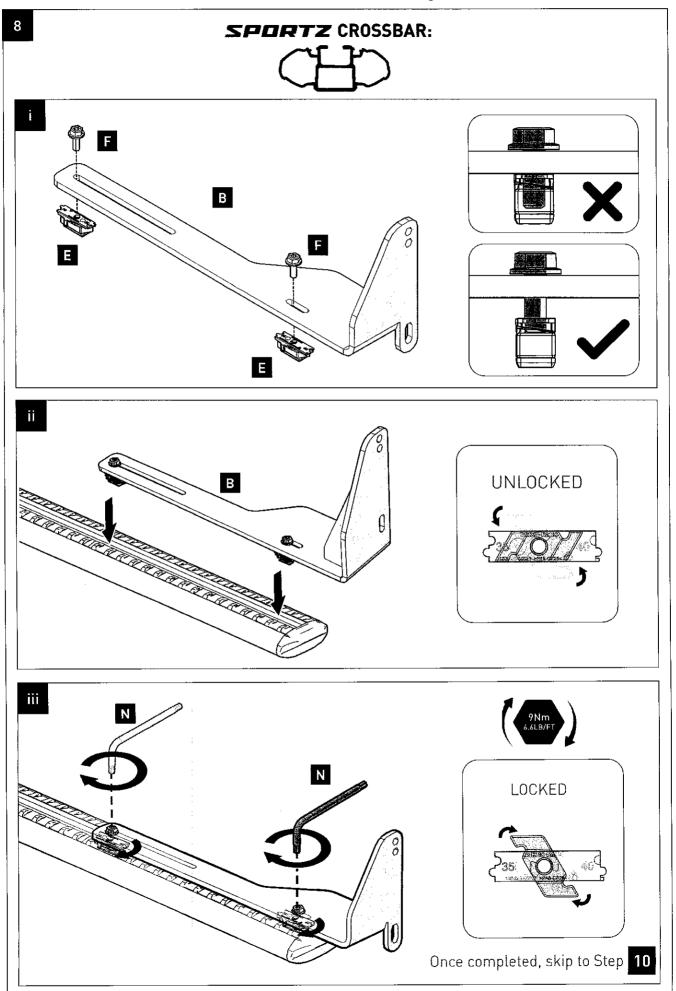

Page 9 of 24

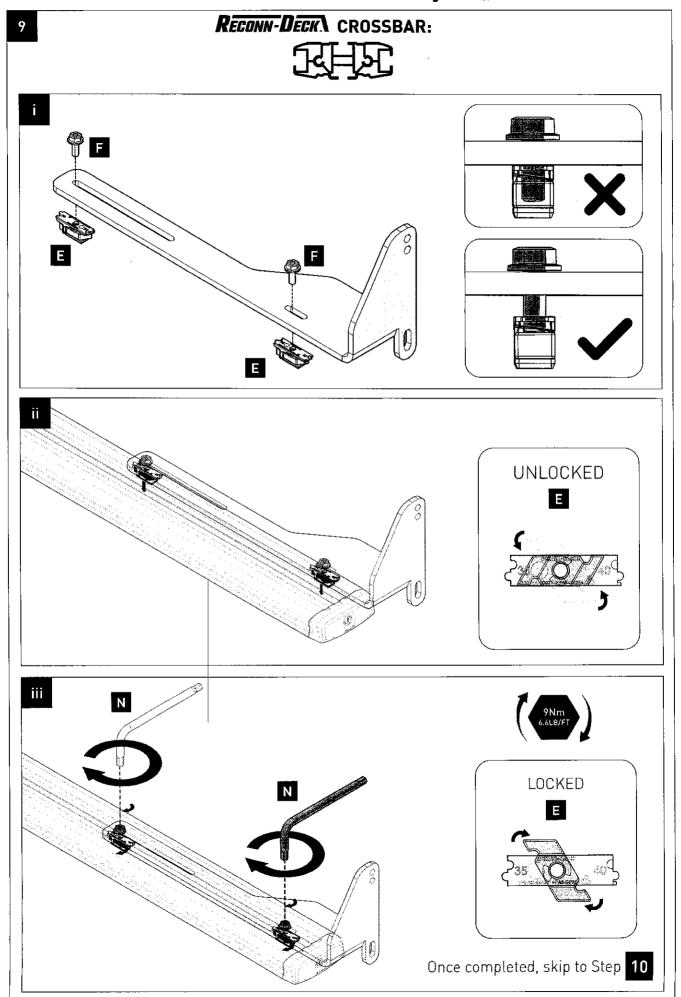


Page 10 of 24


NOTE


Eye Bolts will be used as **tie-down points** for the awning when it is open.

For **RECONN-DECK**, **VORTEX BAR**, & **SPORTZ** Skip to next page.

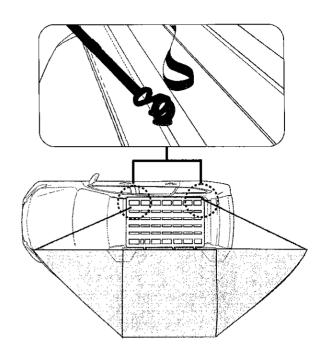


₹ ZWIFLOC_™ Lock Guide

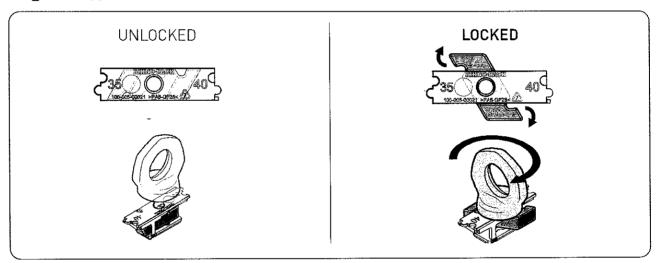


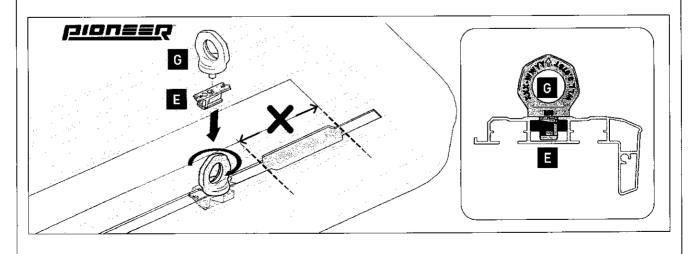



NOTE


For **crossbar** configurations, **bars** on the **opposite side** of the awning to attach the eyebolts.

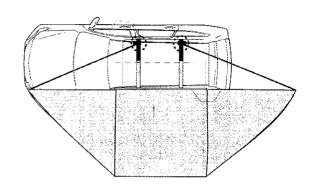


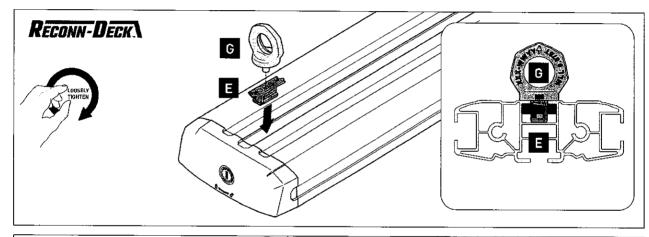

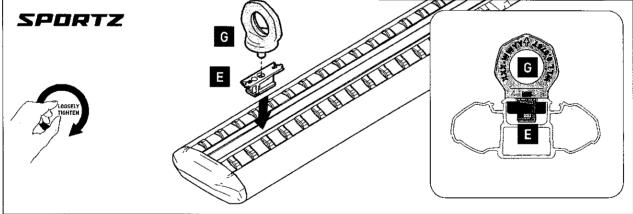


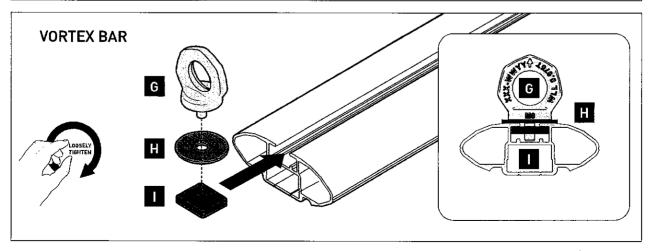


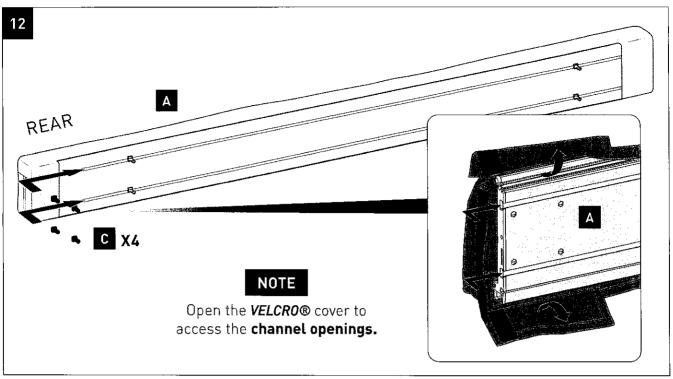


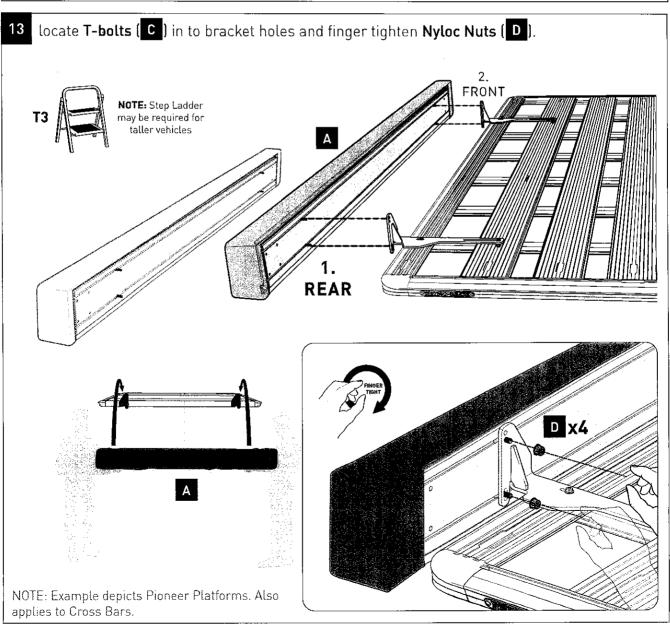

Page 13 of 24

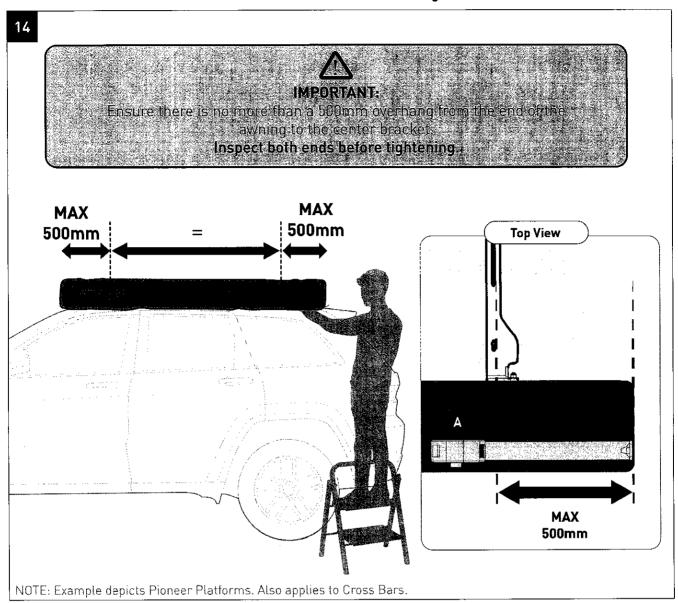


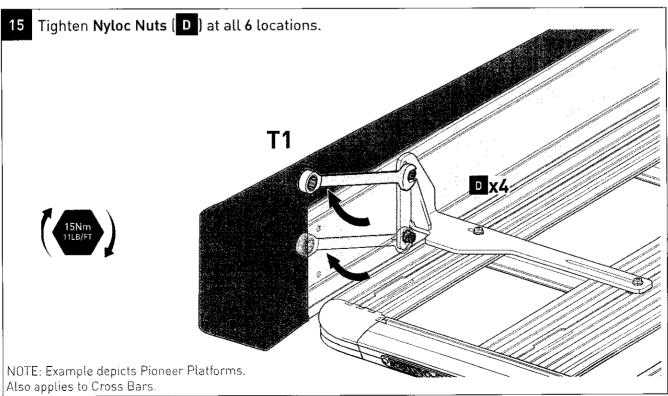

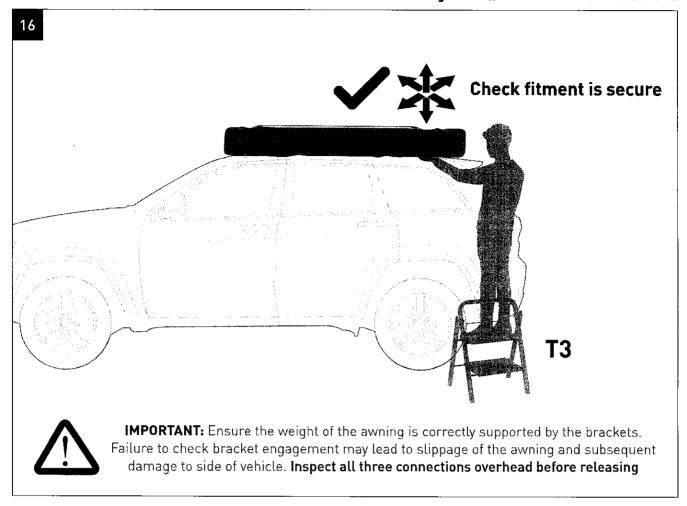






180 AWNING OPERATION

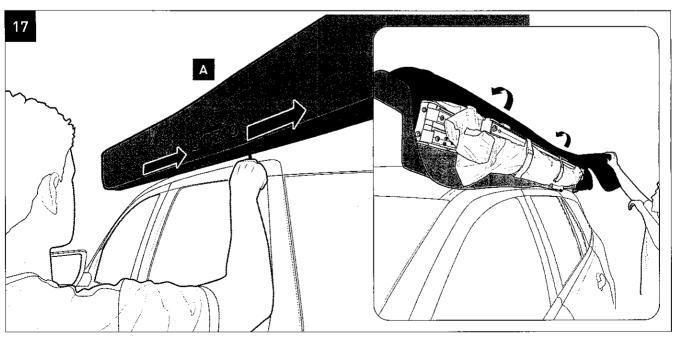


Page 15 of 24

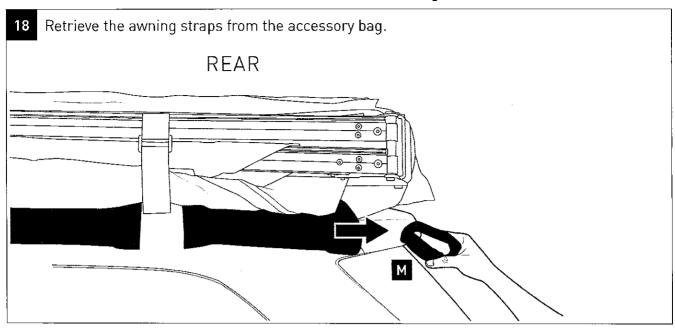


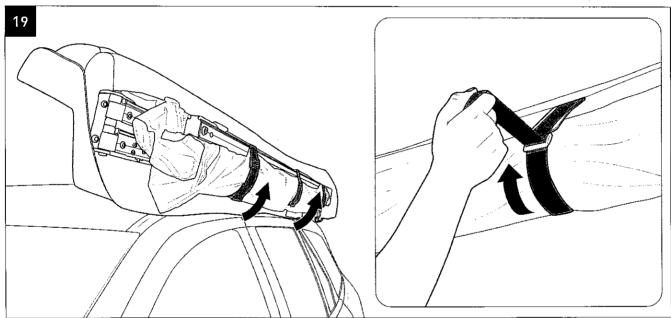


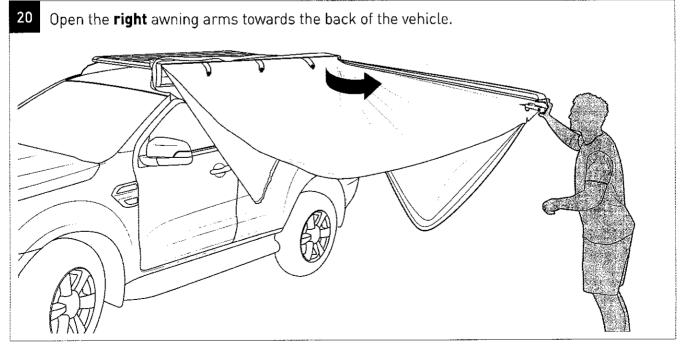


Page 16 of 24

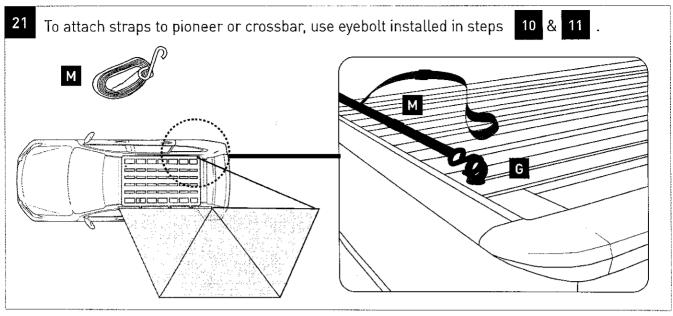


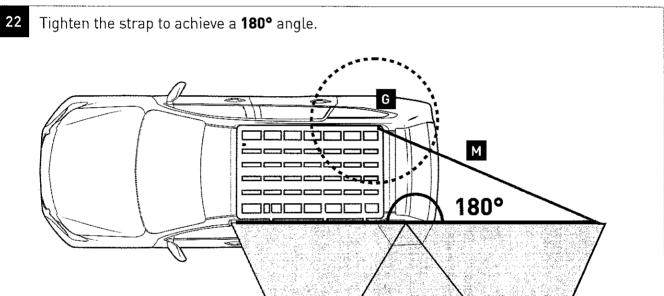


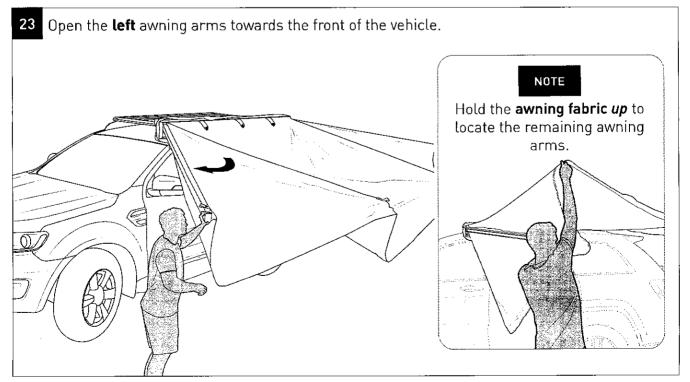

Page 17 of 24

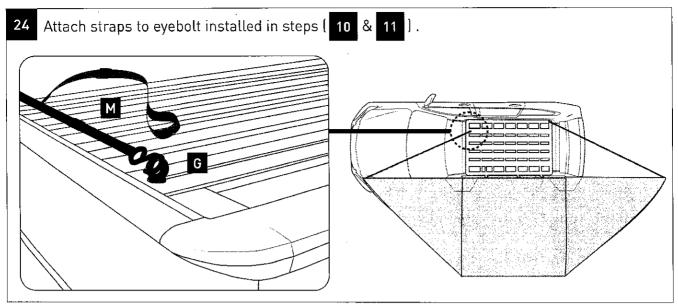


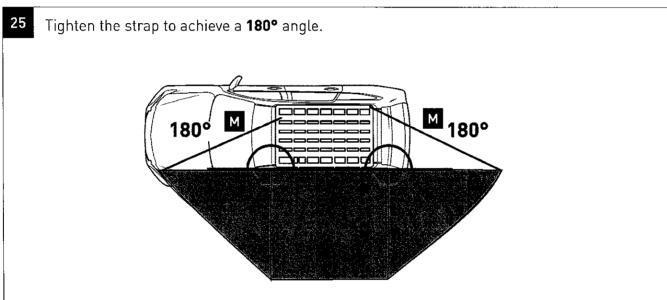


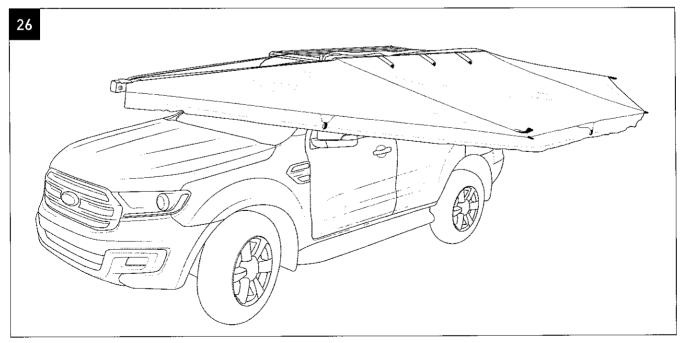


Support Pole Deployment (Optional)


(In **windy** or **rainy** conditions, support poles must be used to provide stability and prevent damage.)

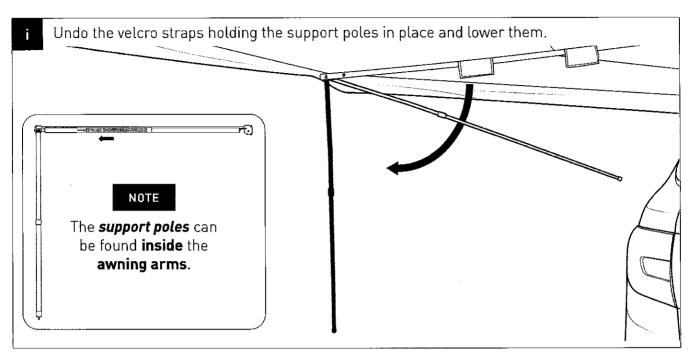


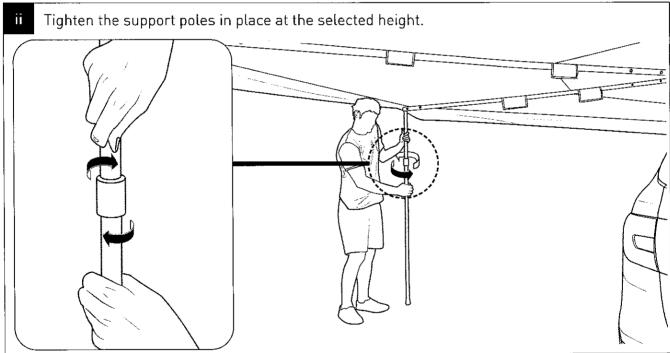

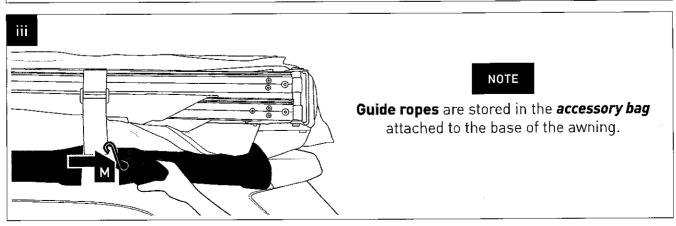


Page 19 of 24

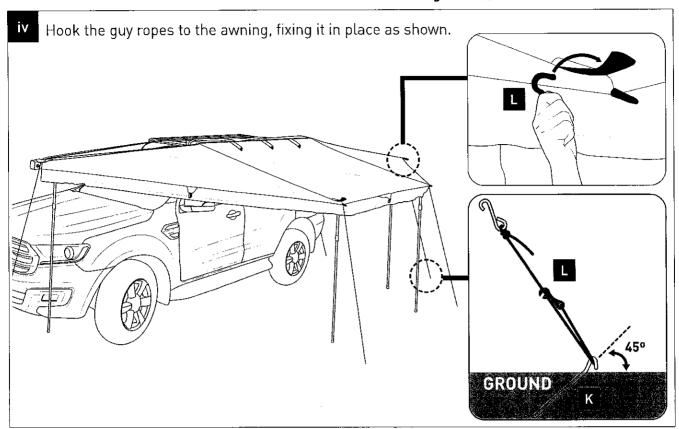


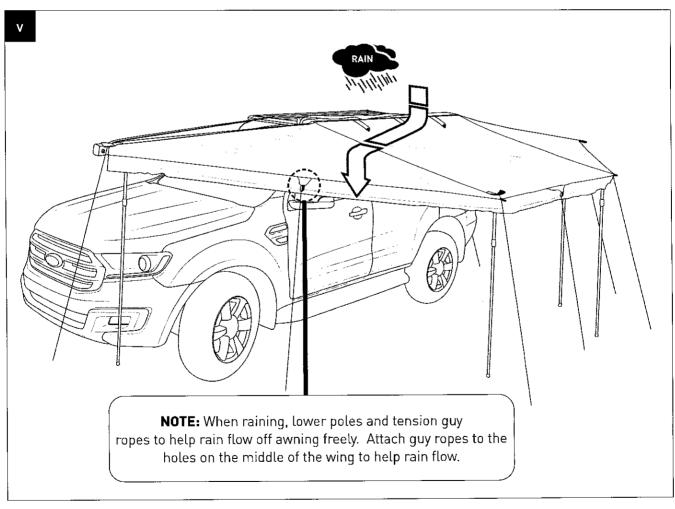


STOWAGE INSTRUCTIONS


(Completion of Steps 17 - 26 in REVERSE order. Use below steps for reference)

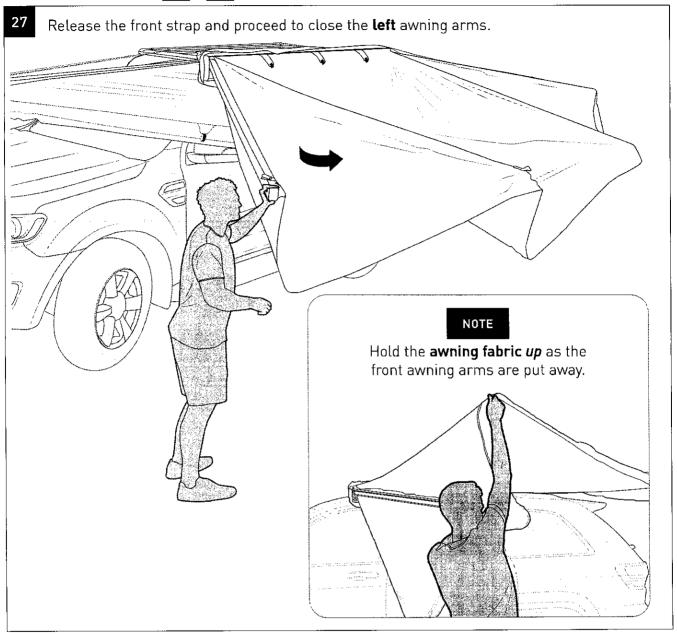

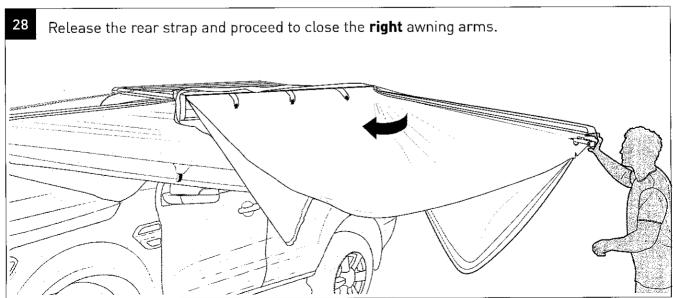


Page 21 of 24

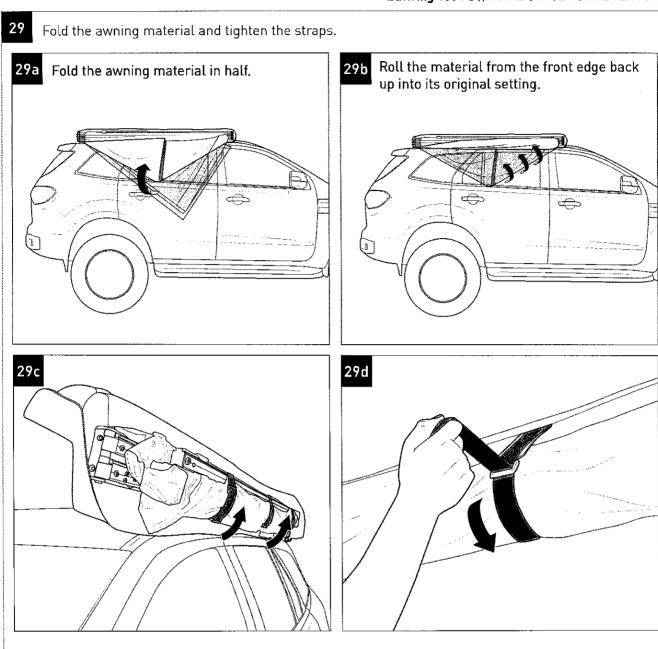


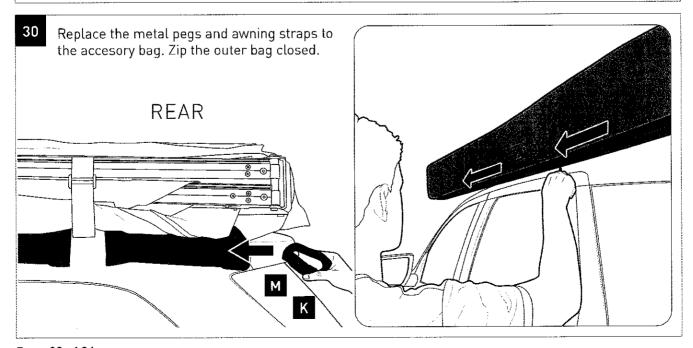

Page 22 of 24

ACCESSORIES

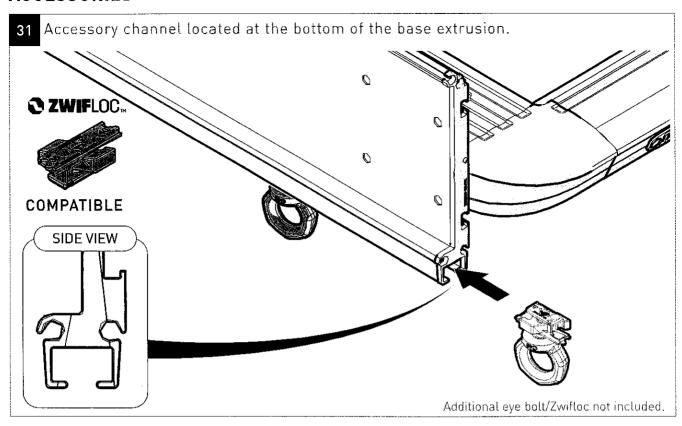

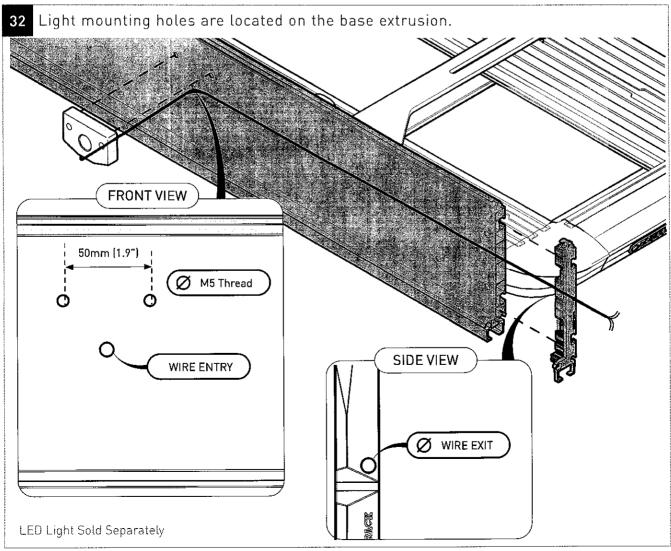

Page 23 of 24



RHINORACK.COM

Rhino-Rack AUSTRALIA 22A Hanson Pl, Eastern Creek, NSW, 2766

> Rhino-Rack USA 19822 E 22nd Ave, Aurora, CO, 80011