



RHINO-RACK®

Sunseeker Awning


32139 (2.0m) / 32140 (2.5m)










Important:

1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. Place these instructions in the vehicle's glove box after installation is complete.
5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

sunseeker

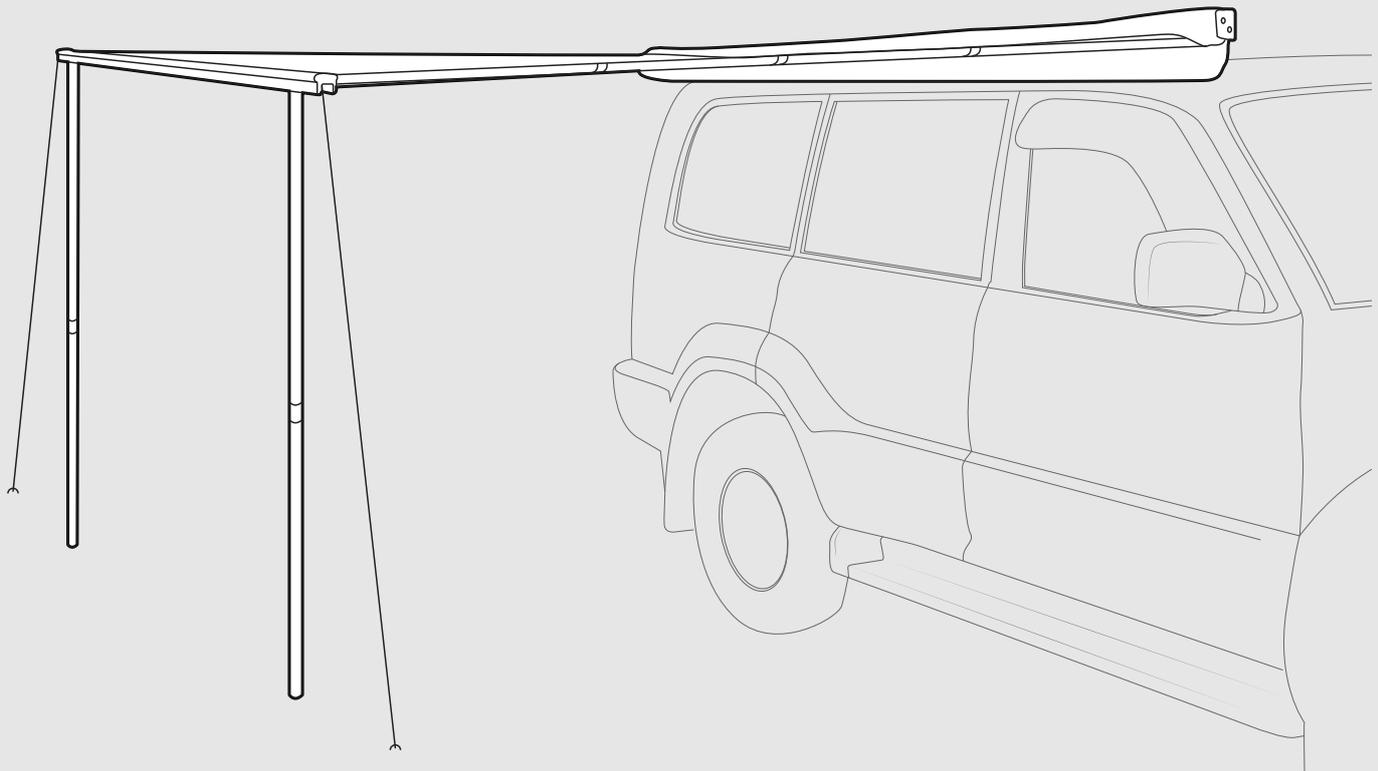

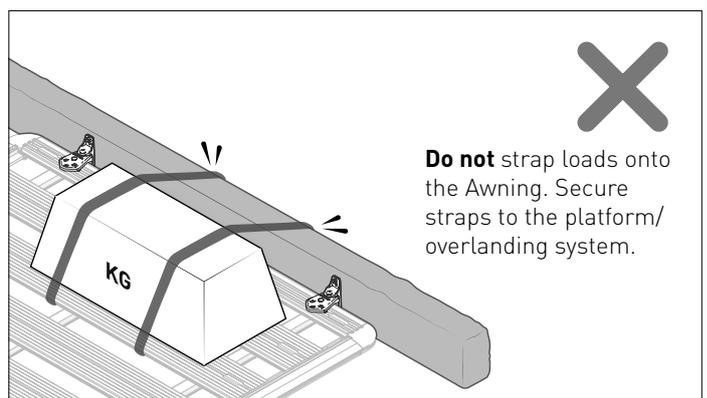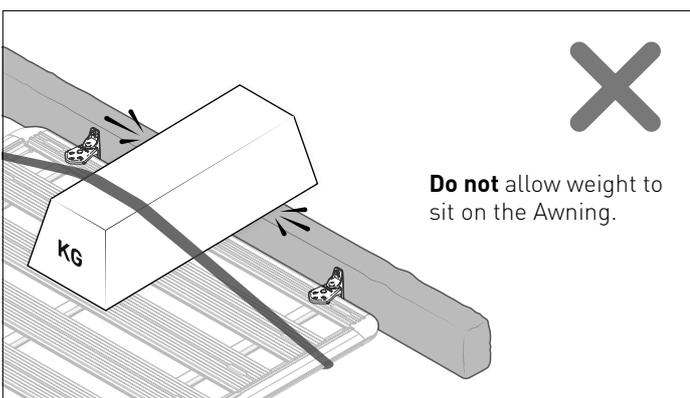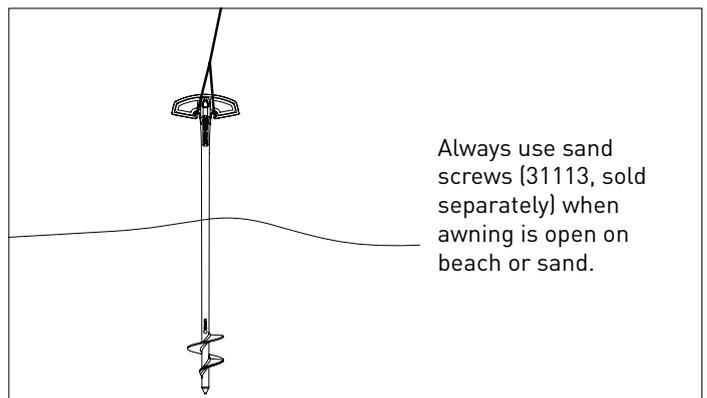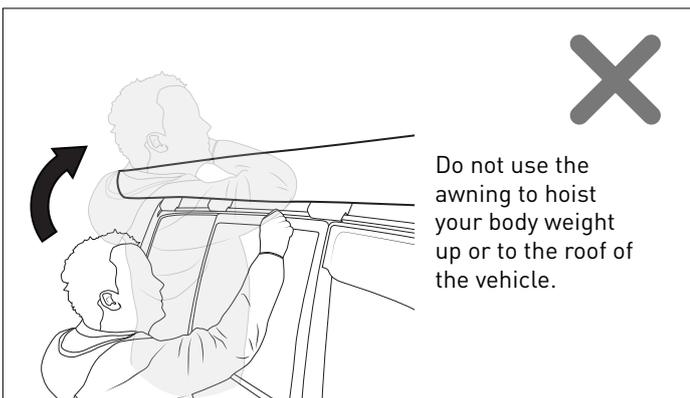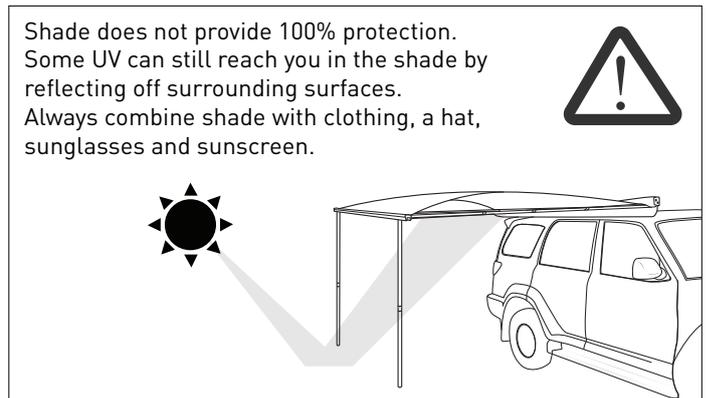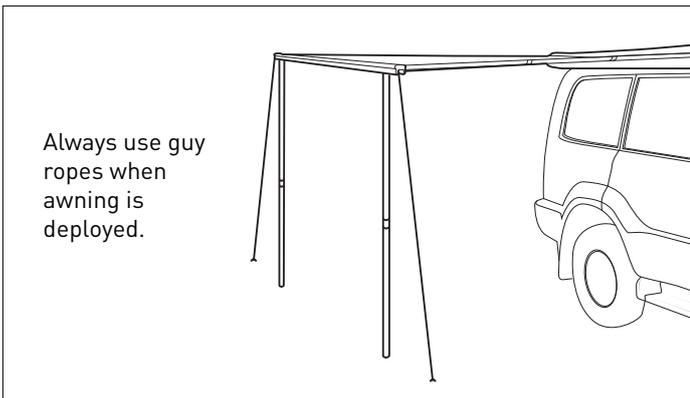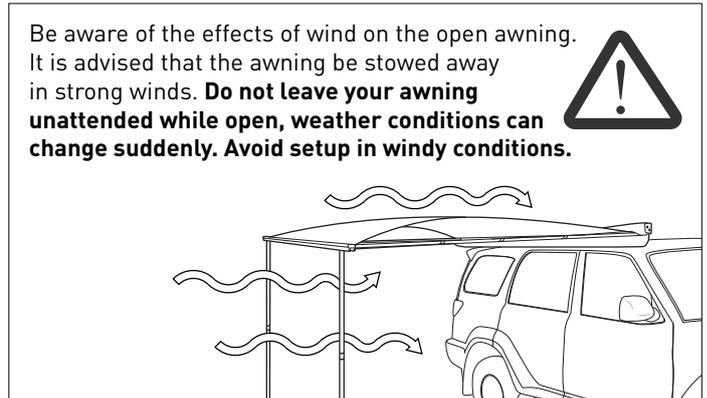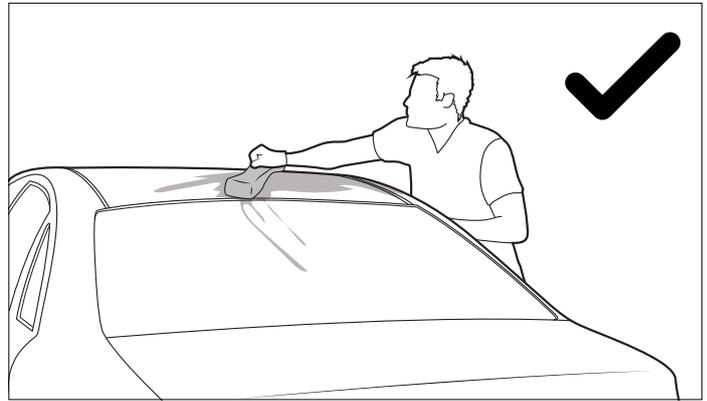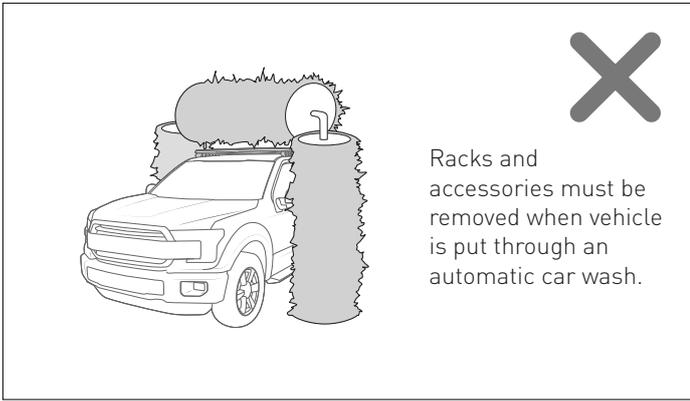

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Awning and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:




Load Ratings

With the addition of the Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Awning with mounting brackets weighs approximately 11kg.



Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client. It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Placement and Dimensions

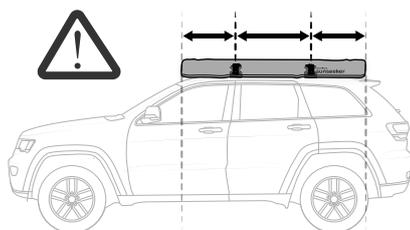

NOTE: Ensure Awning has close to equal overhang over Front and Rear crossbars.

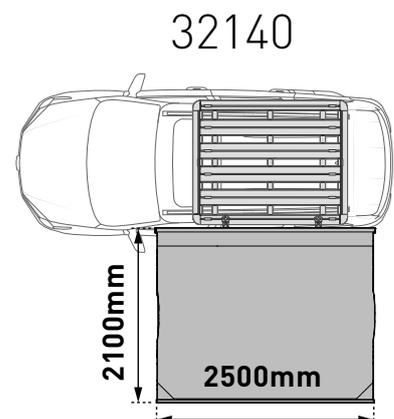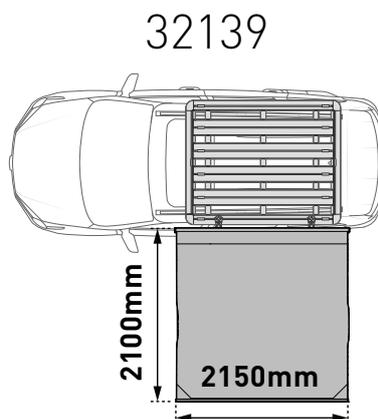


CONTENTS

Installation onto:

Pioneer Platforms	Steps	1 - 6 and 8 - 16
Reconn-Deck NS Bars	Steps	1 - 6 and 8 - 16
VA / HD / RD Crossbars	Steps	7 - 16
Operation	Steps	17 - 22
Storage	Steps	23 - 26

Parts List

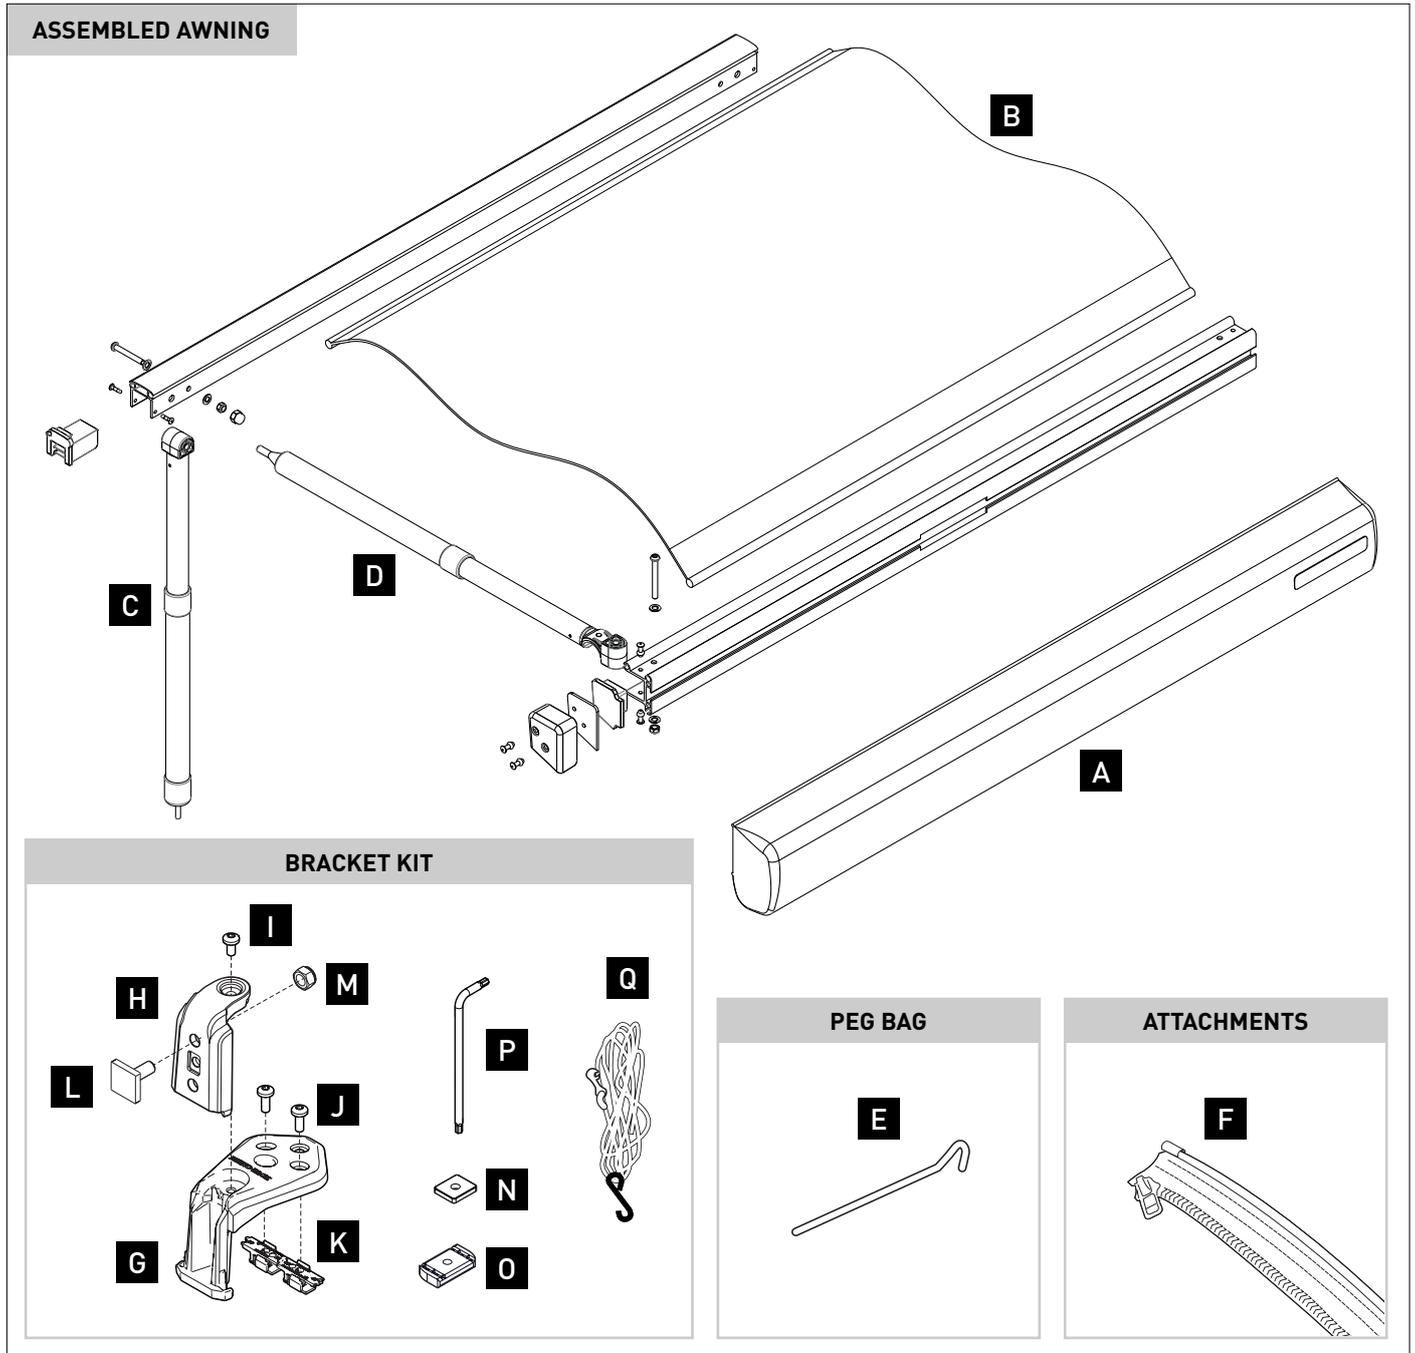

Item	ASSEMBLED AWNING	Qty
A	Awning Bag	1
B	Awning Material	1
C	Vertical Front Pole	2
D	Horizontal Support Pole	2

Item	PEG BAG	Qty
E	Metal Peg	2

Item	ATTACHMENTS	Qty
F	Awning Extension Adaptor	1




Item	BRACKET KIT	Qty
G	Stow-It Base Bracket	2
H	Universal Adaptor	2
I	M6 x 12mm Torx Pan Head Screw	2
J	M6 x 16mm Torx Pan Head Screw	4
K	M6 Zwifloc Drop-in Nut Assembly	4
L	M8 x 20mm T-bolt	2
M	M8 Flanged Nyloc Nut	2
N	M6 24 x 21mm Nut	4
O	M6 Channel Nut	4
P	T30 Torx Key	1
Q	Guy Rope with 'S' Hook	2

TOOLS REQUIRED:


- T1** - Tape Measure
- T2** - 13mm (1/2") Socket wrench
- T3** - Step Ladder
- T4** - Hammer/mallet

For Installation onto PIONEER PLATFORMS and RECONN-DECK NS BARS


(For Crossbars, skip to Step **7**)

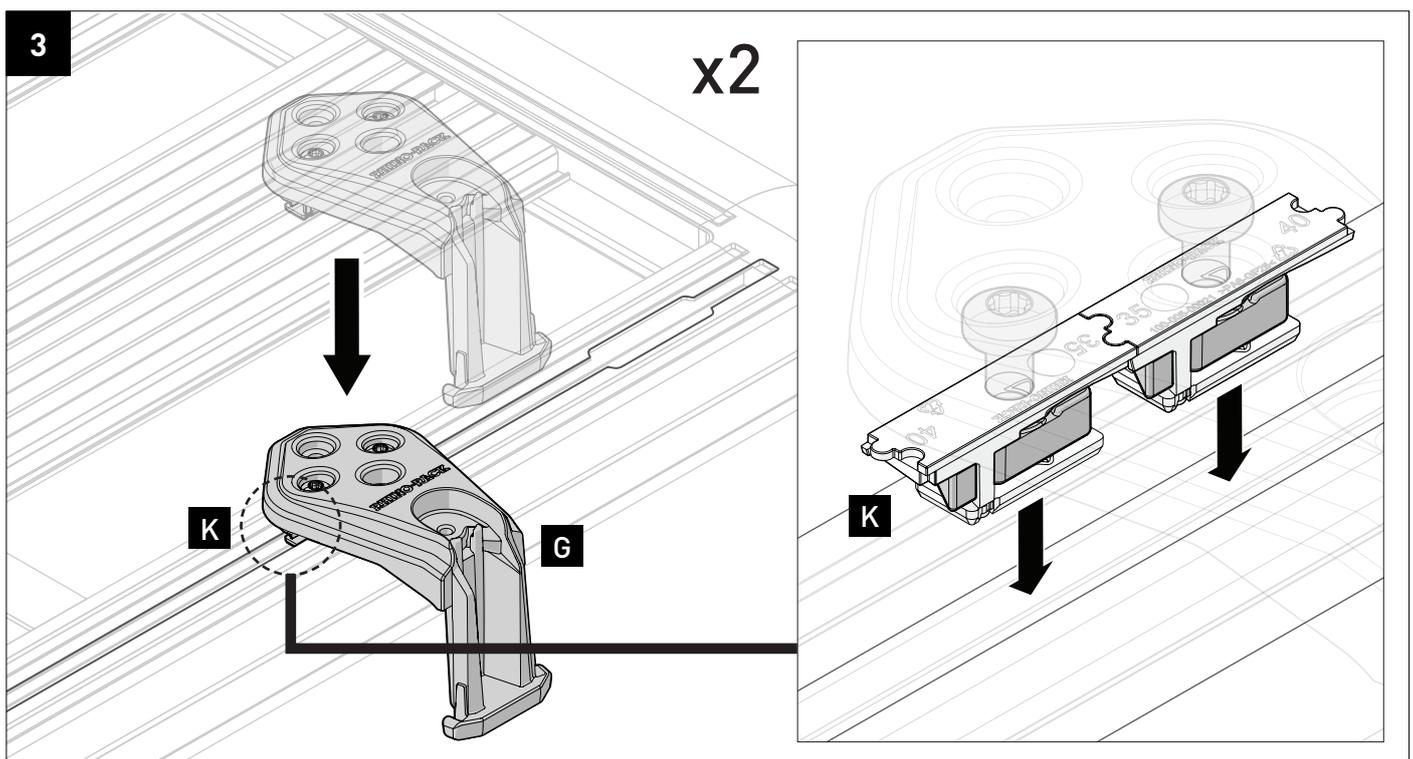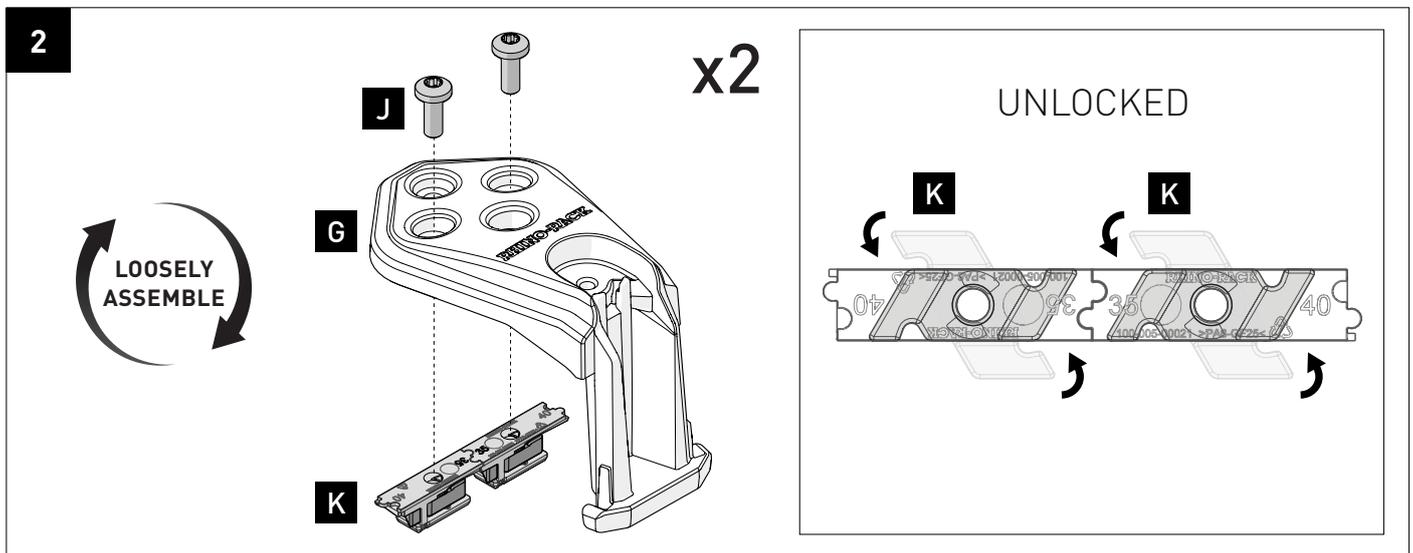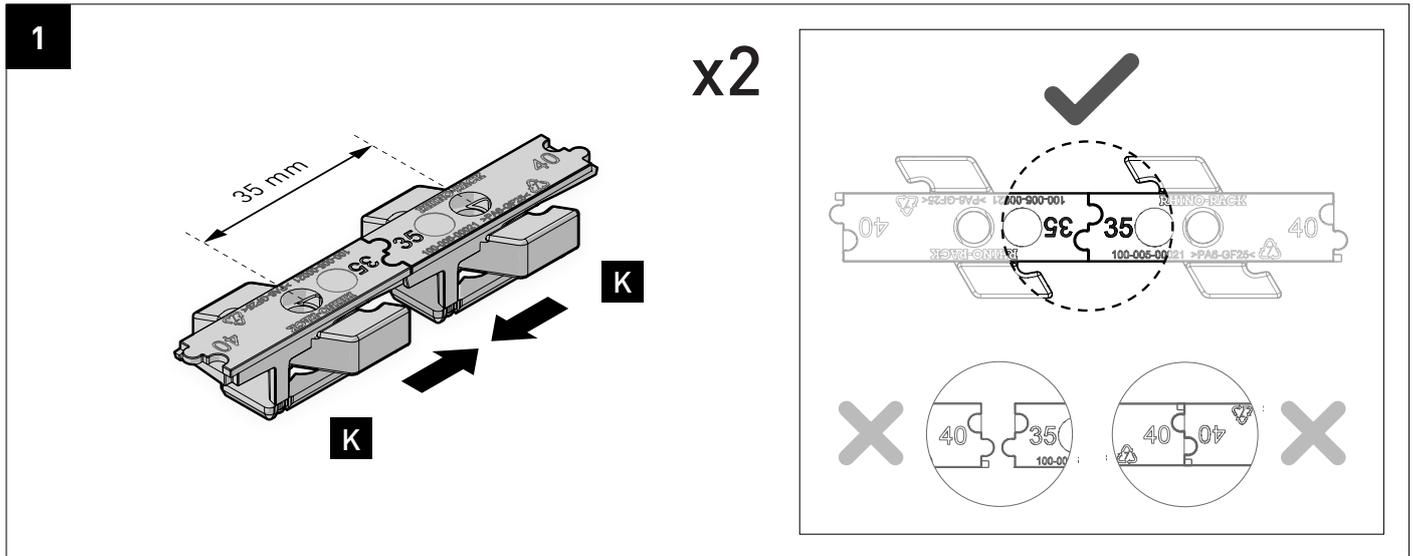


4 Loosely fasten into the channel, but do not tighten.

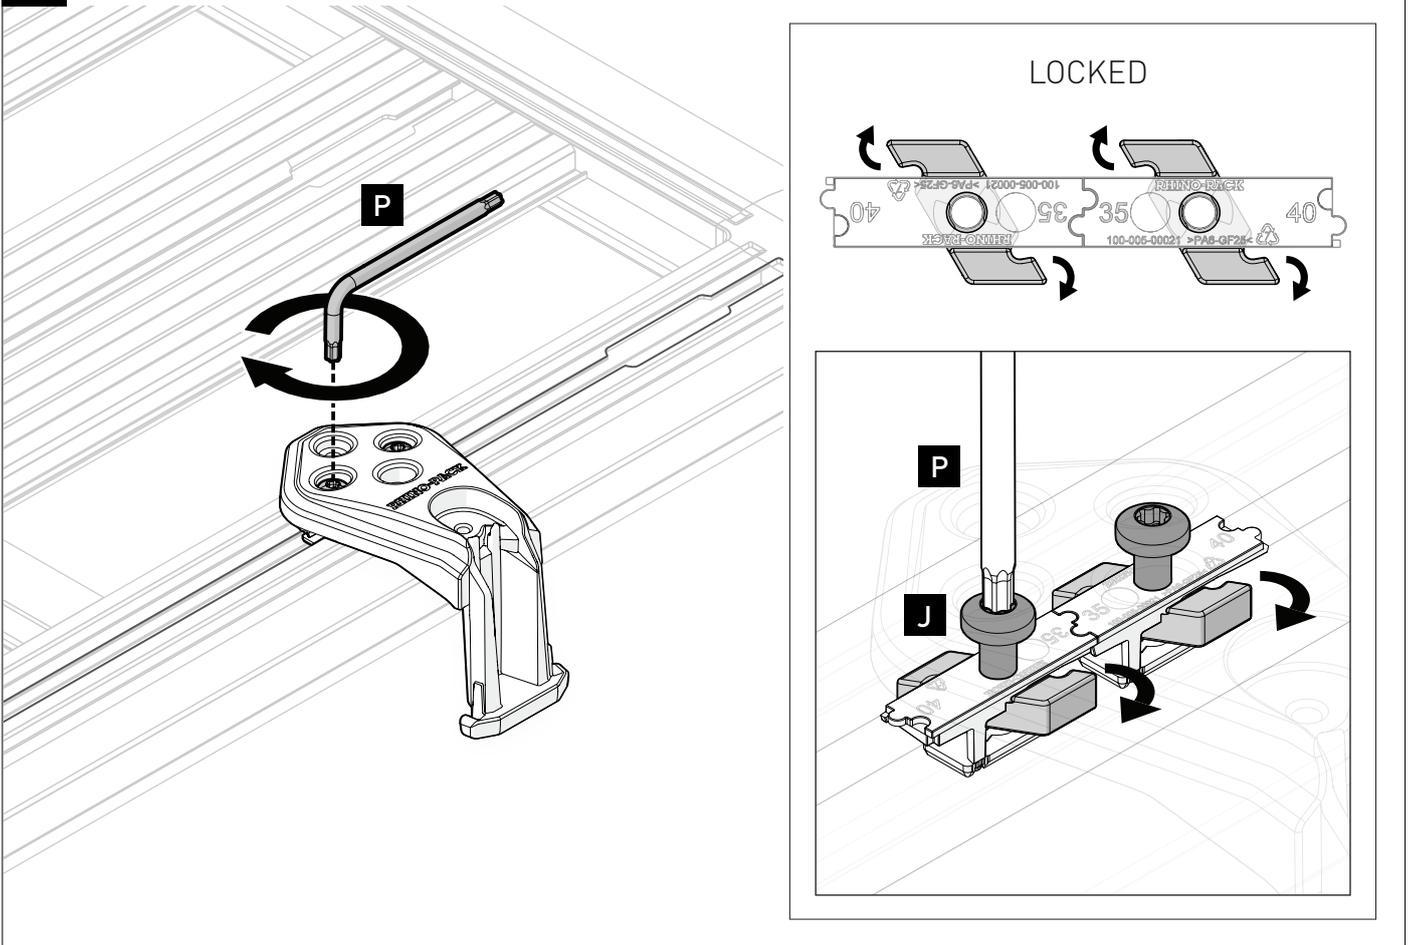


5 Move brackets to outermost edges of Platform, **avoiding channel apertures**.

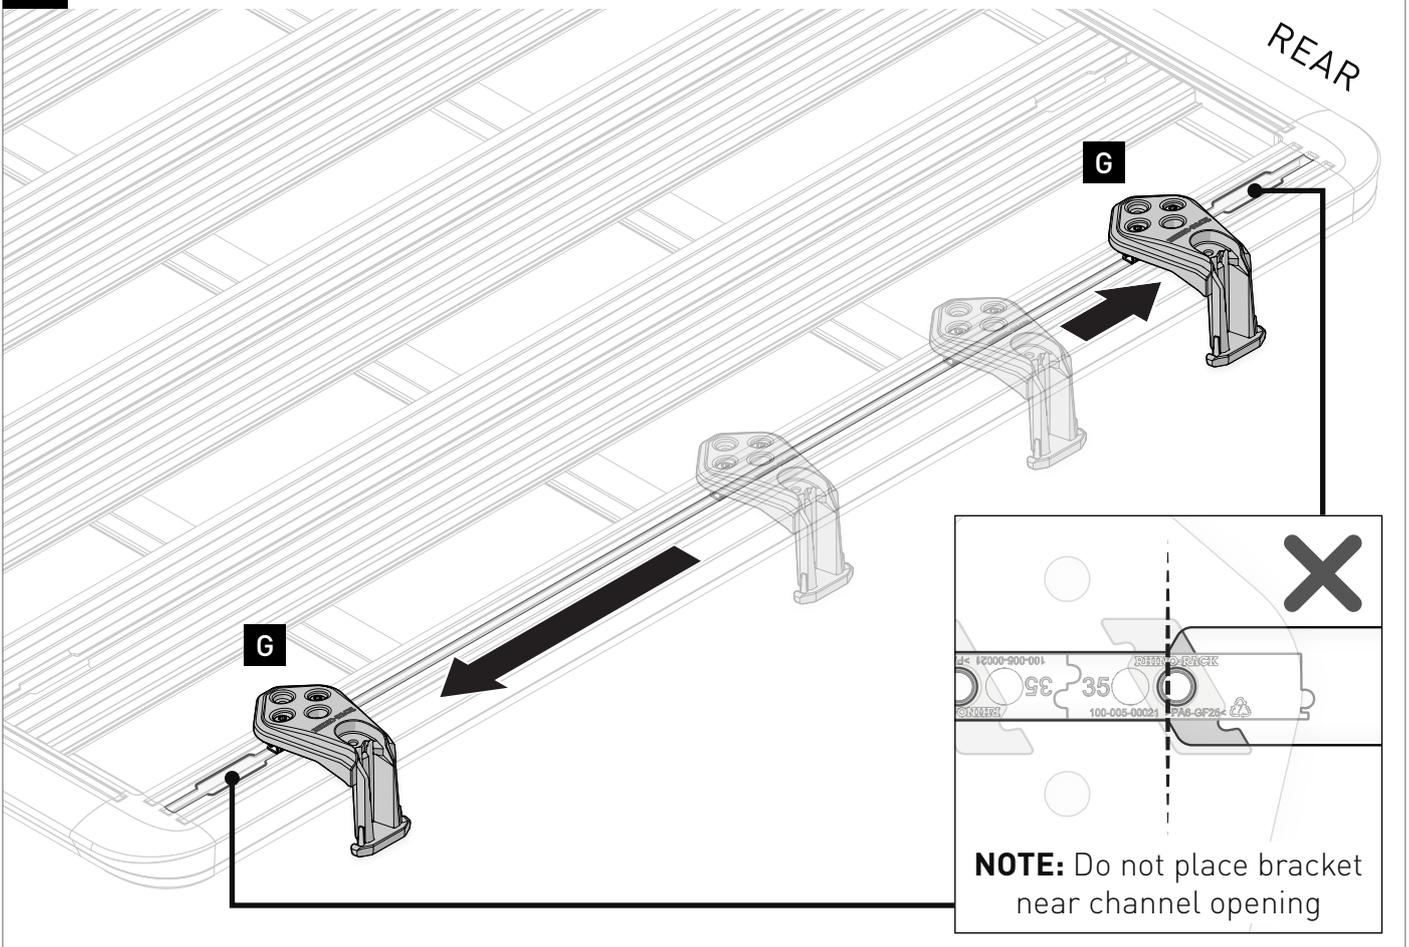

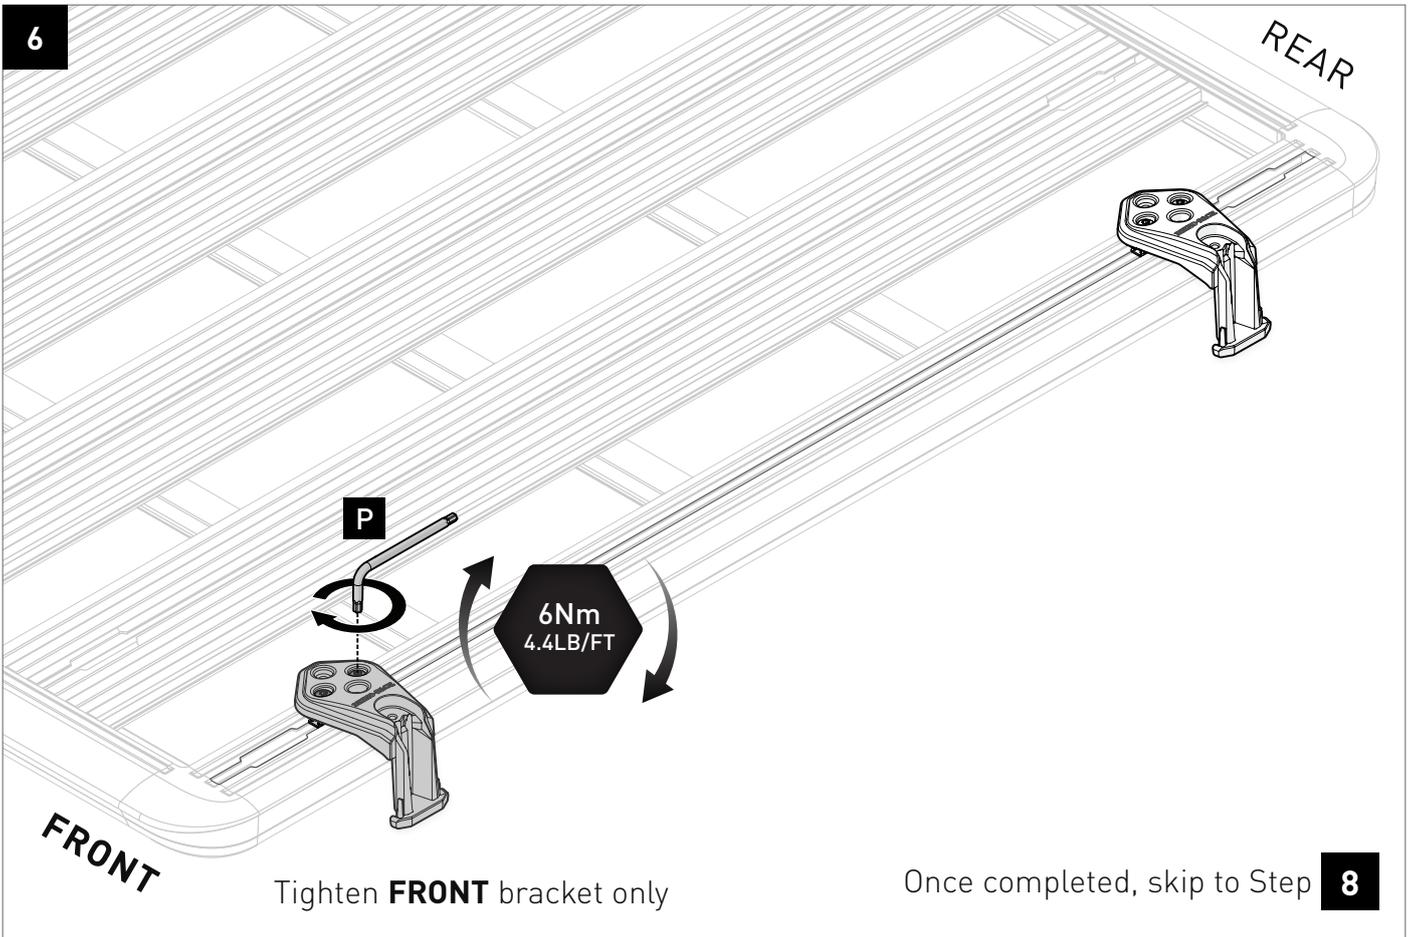



FOR INSTALLATION ONTO CROSSBARS

(For Platforms / Reconn-deck NS Bars skip to Step **8**)

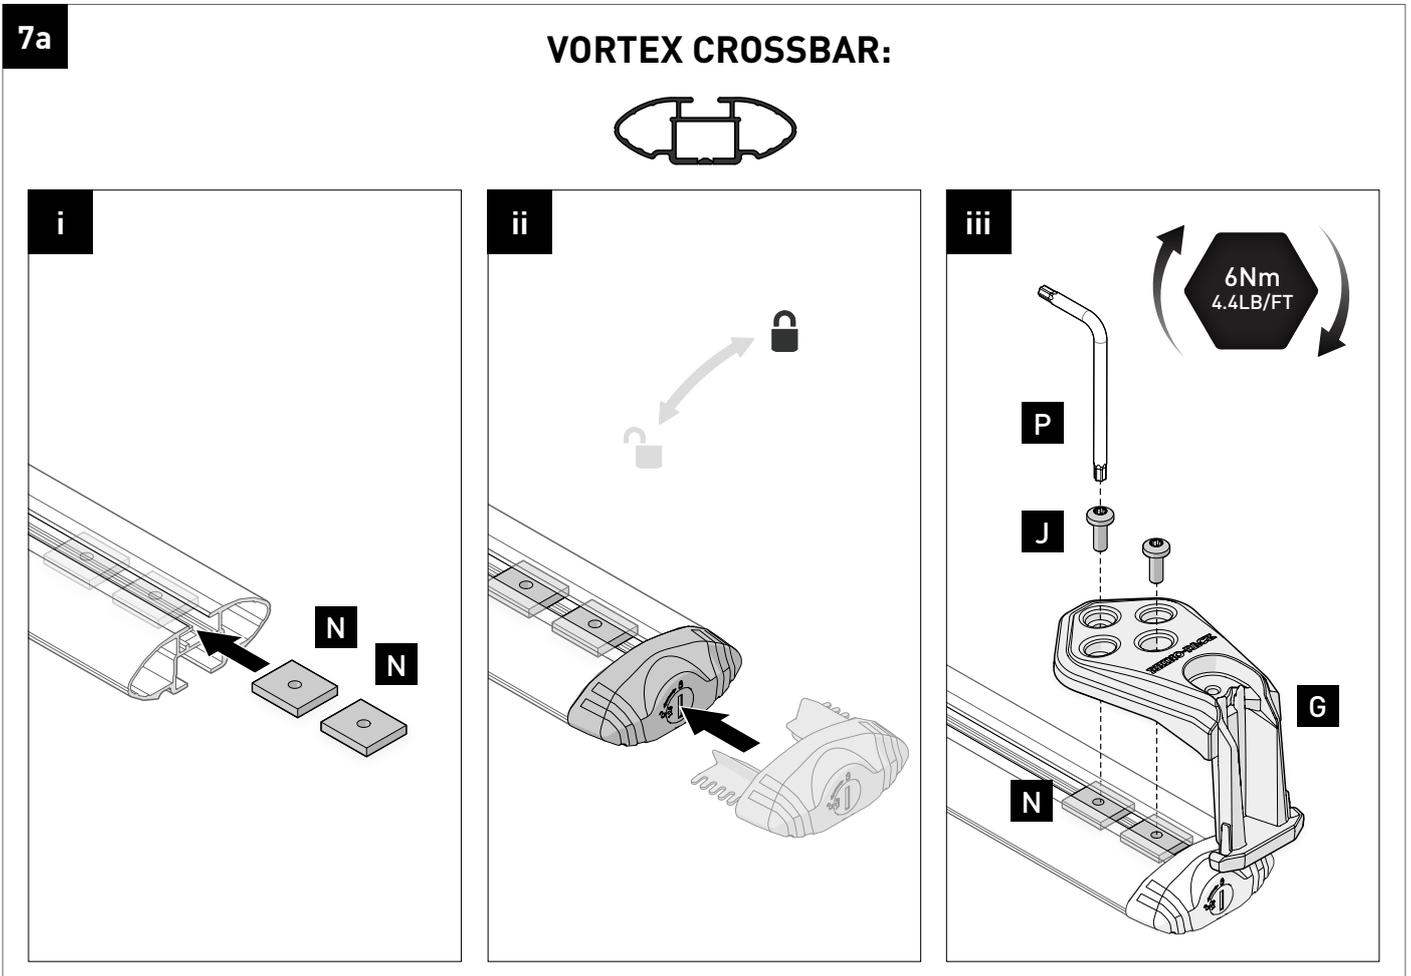




7b

HEAVY DUTY CROSSBAR:

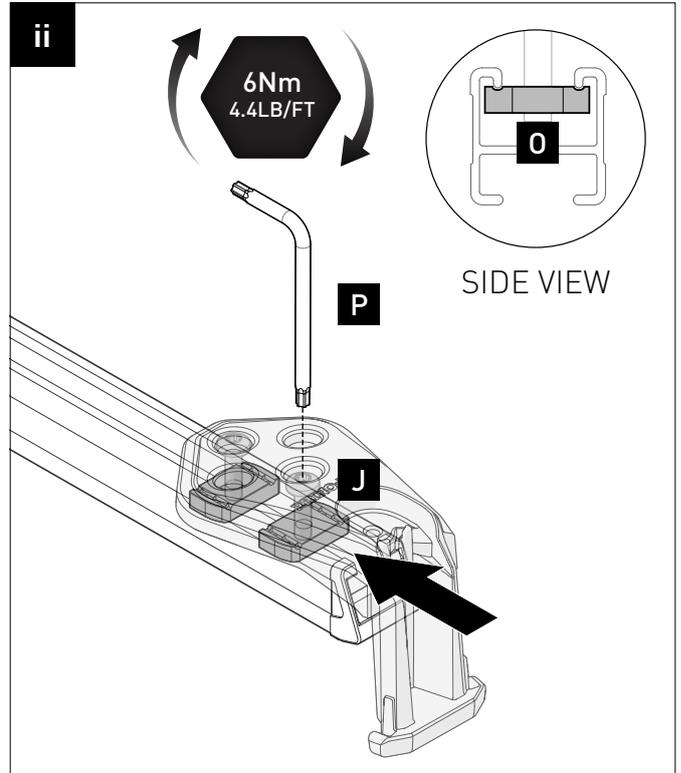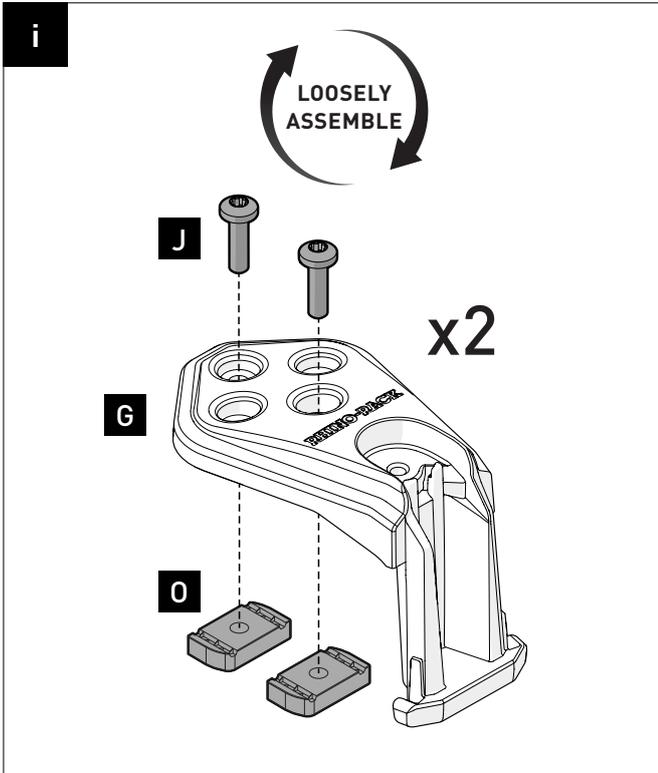


7c

RECONN-DECK CROSSBAR: Continues to next page.

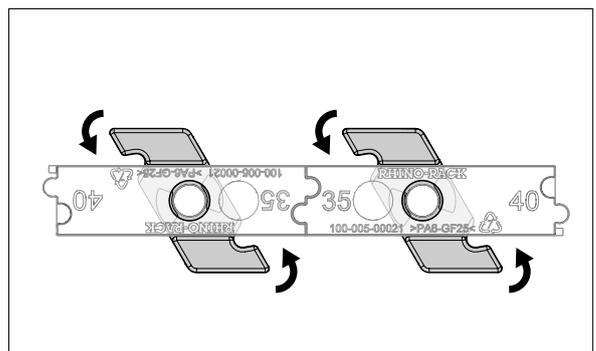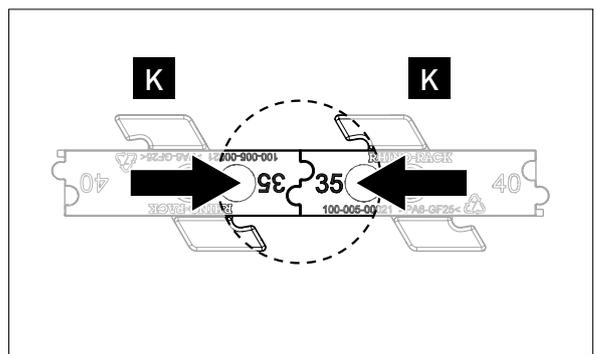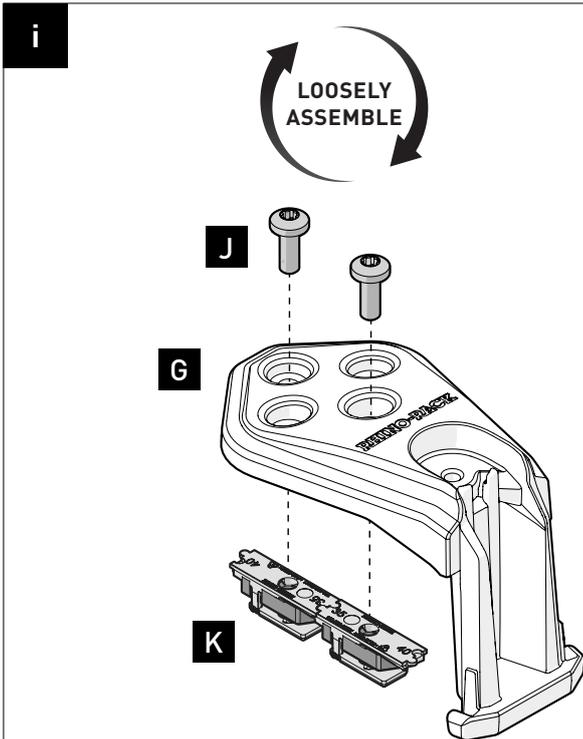


7c

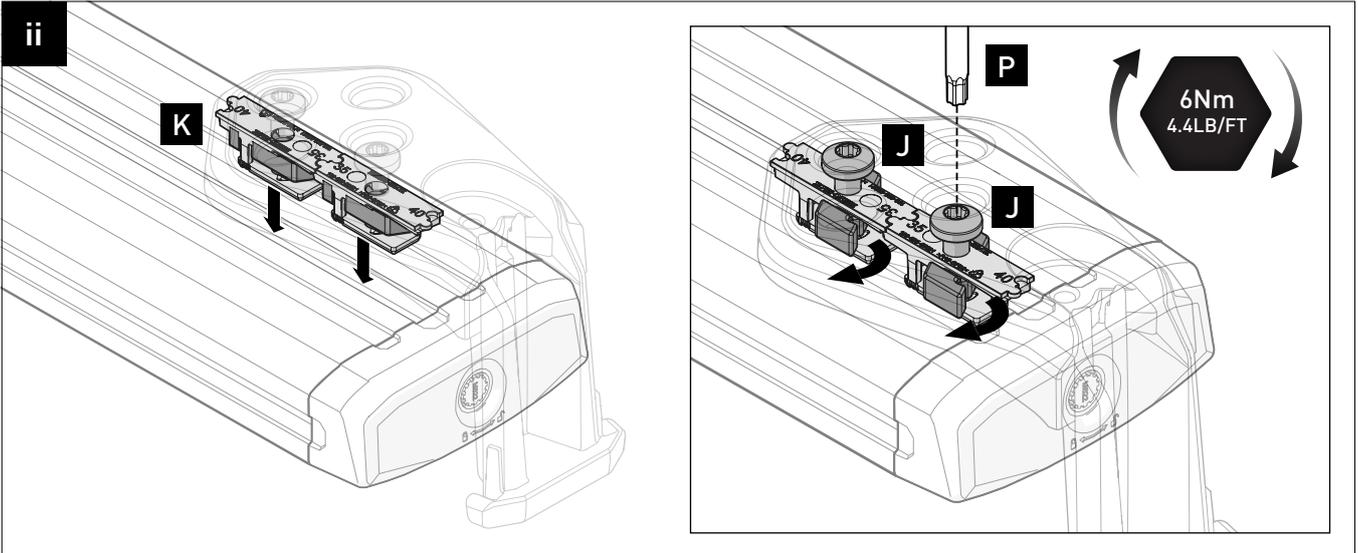


8 Select most suitable hardware height.

NOTE: If high vehicle clearance is needed, assemble hardware onto upper hole.


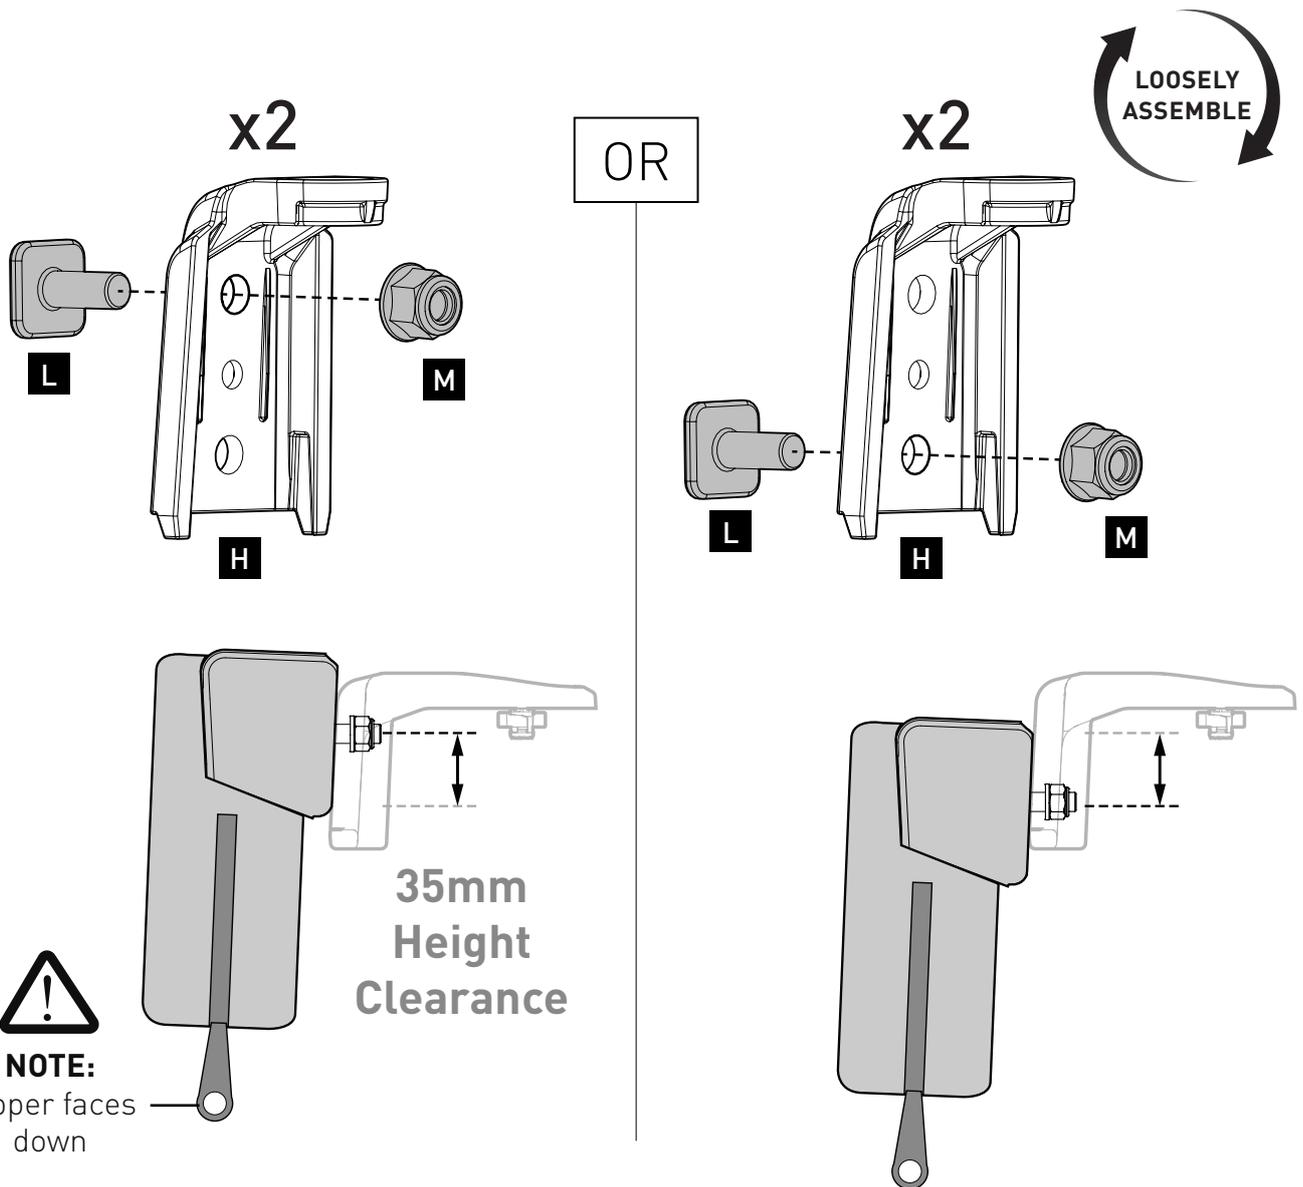


9


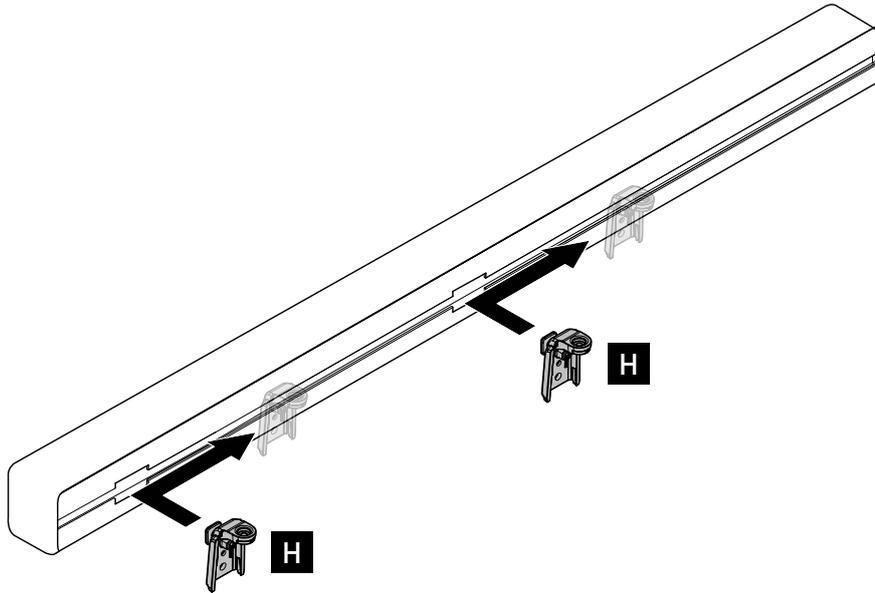


10 Measure the distance between the Base Bracket centers.


Also applies to **Crossbar** fits

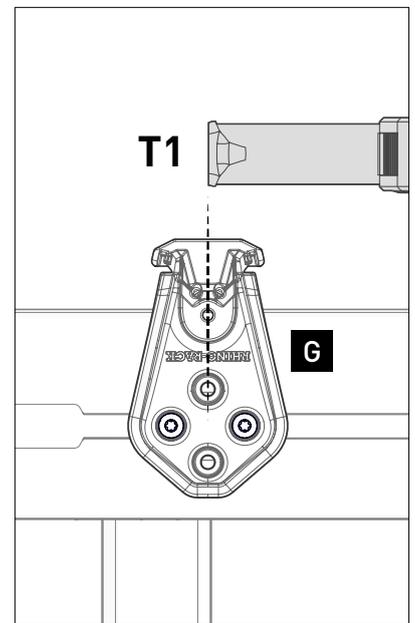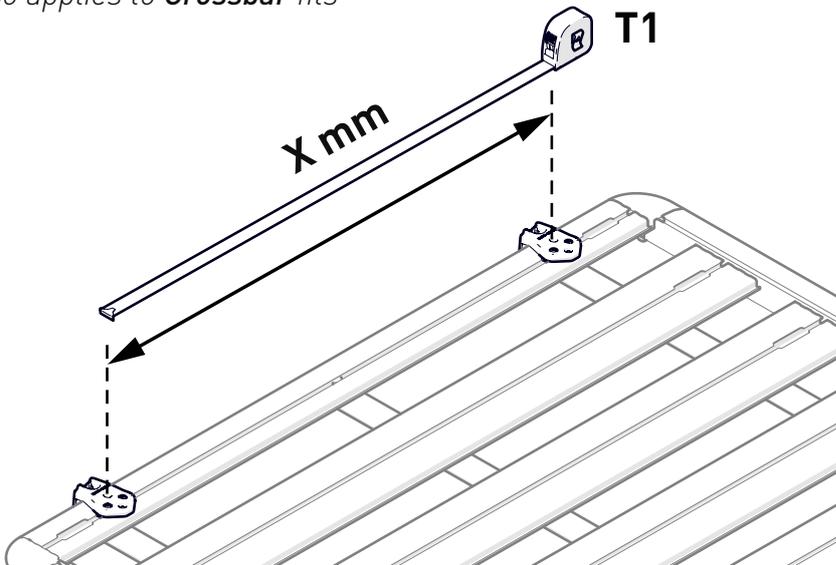

11 Slide adaptors to match the distance measured in Step 10

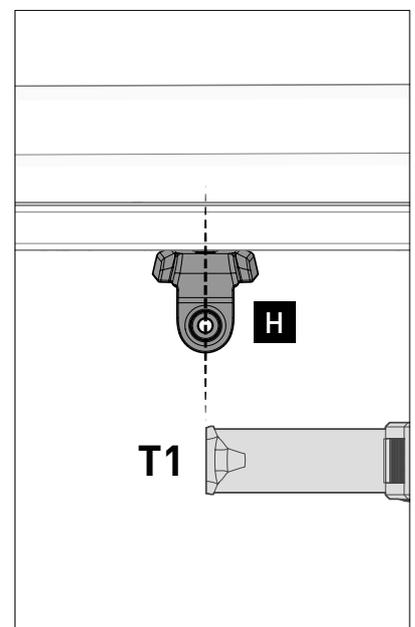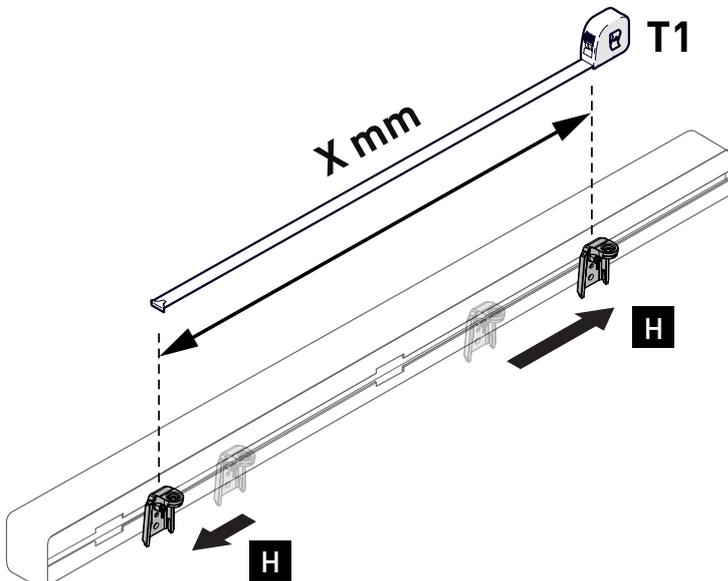


12

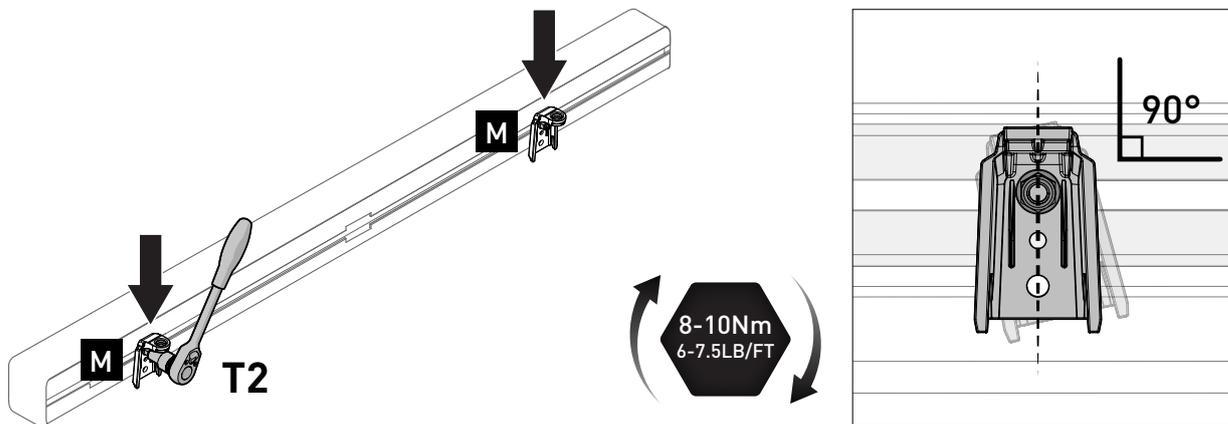


13

Place Awning with Adaptors onto Base Brackets.


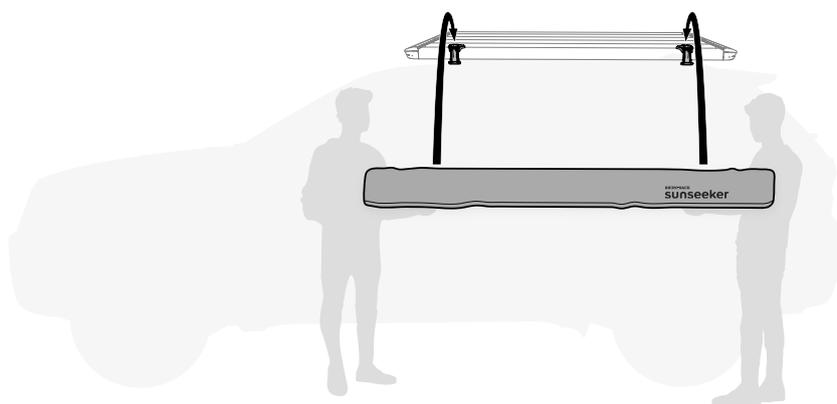


NOTE: Step Ladder may be required for taller vehicles




T3

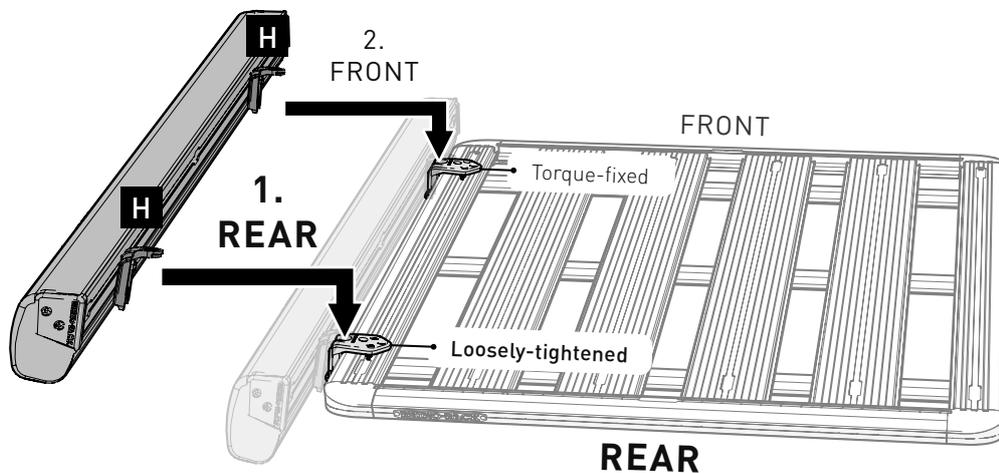

IMPORTANT: Inspect both connections overhead before releasing awning.

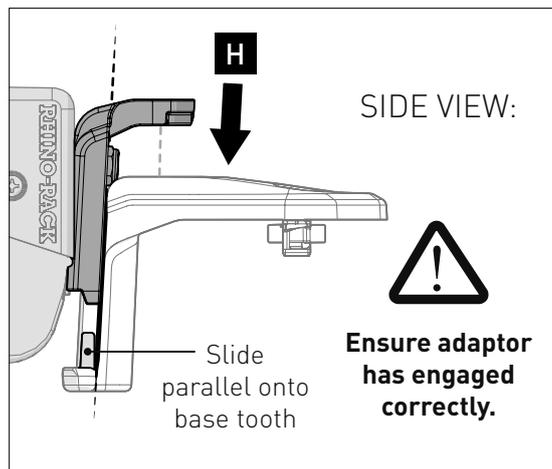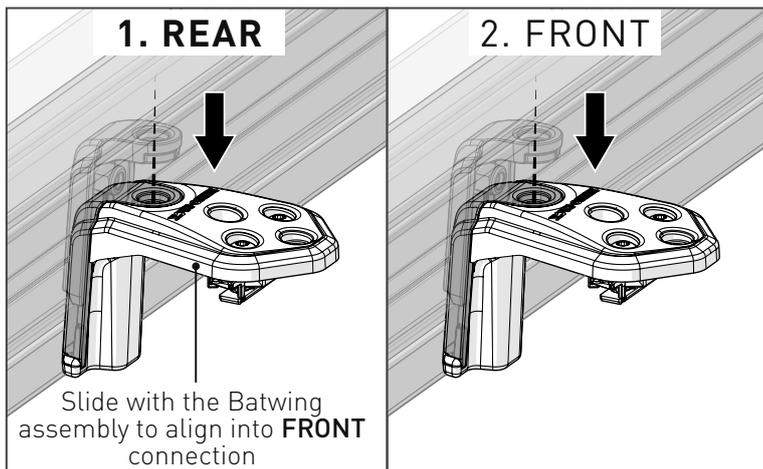


Ensure adaptor has engaged correctly.

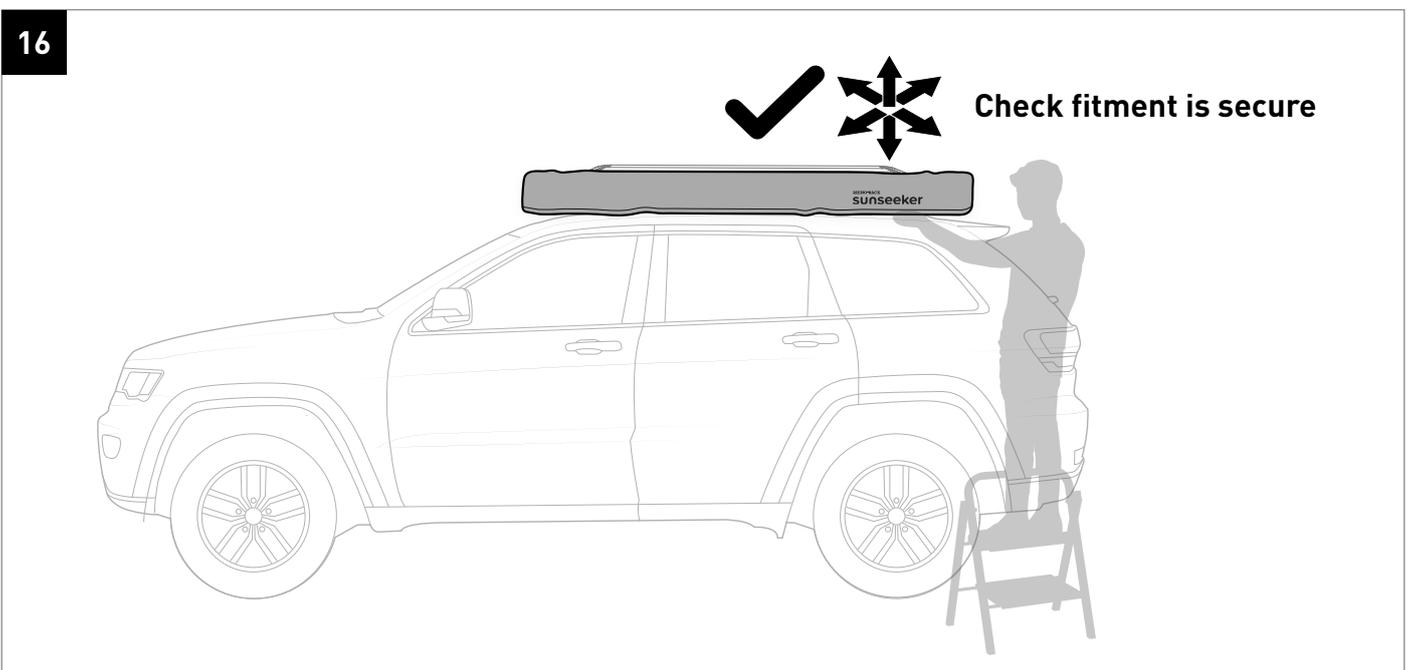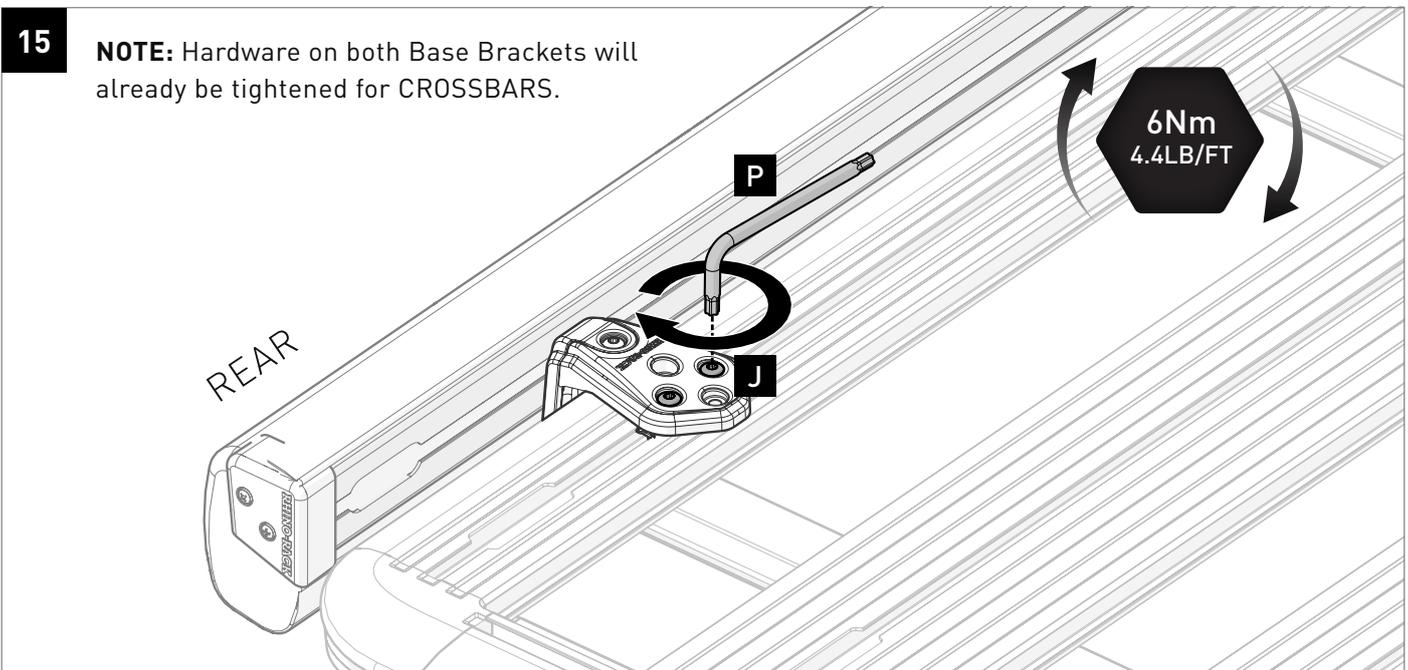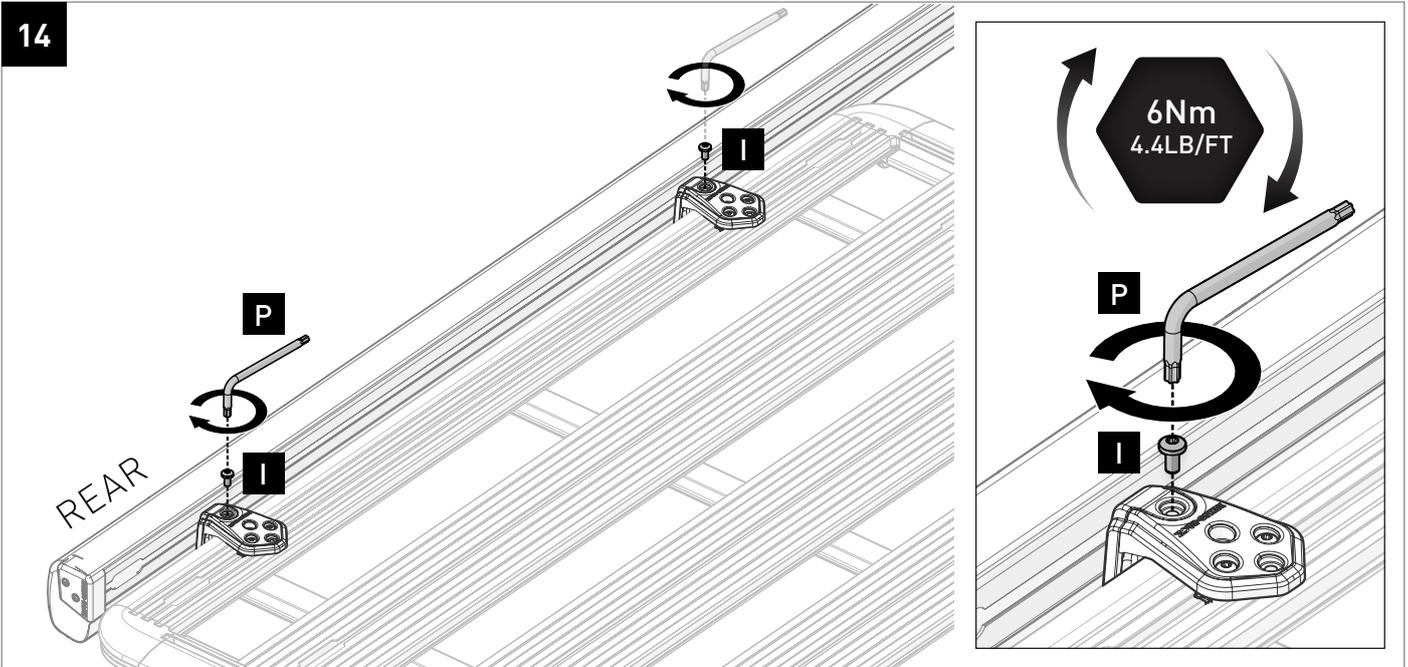

AWNING OPERATION


- 17** Unzip Awning Bag **A** and undo the Velcro Straps, while holding the Awning in place.

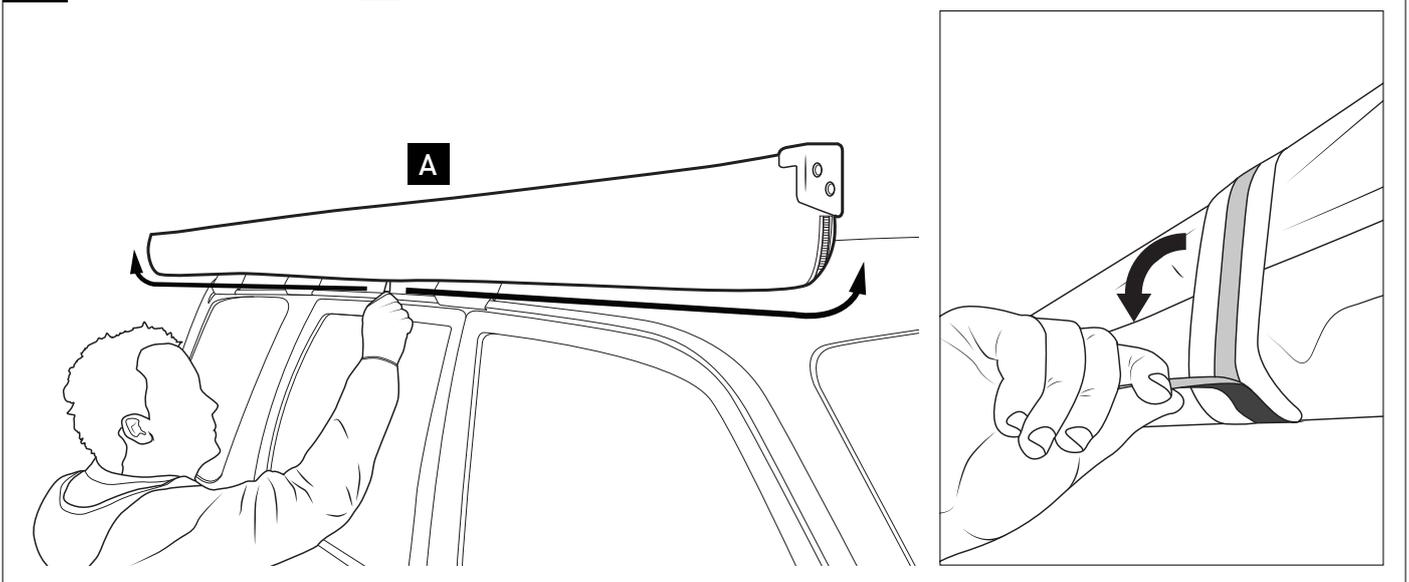


18

- 1.** Carefully unroll the Awning Material **B** partway.
The Horizontal Supports Poles **D** should be exposed at this point.

- 2.** Rotate both **D** Supports out from the body of the Awning.

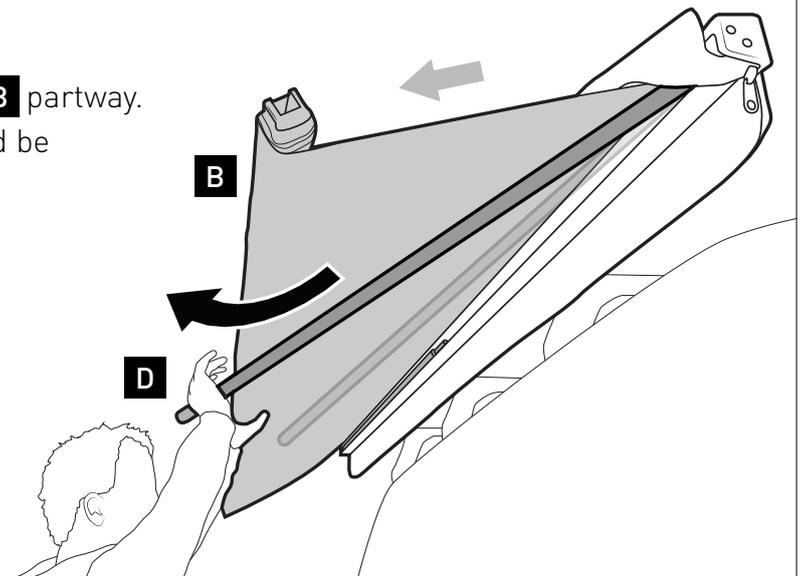


- 19** With the awning extended, drop down the Vertical Front Poles **C**
Extend to appropriate height and tighten in place.

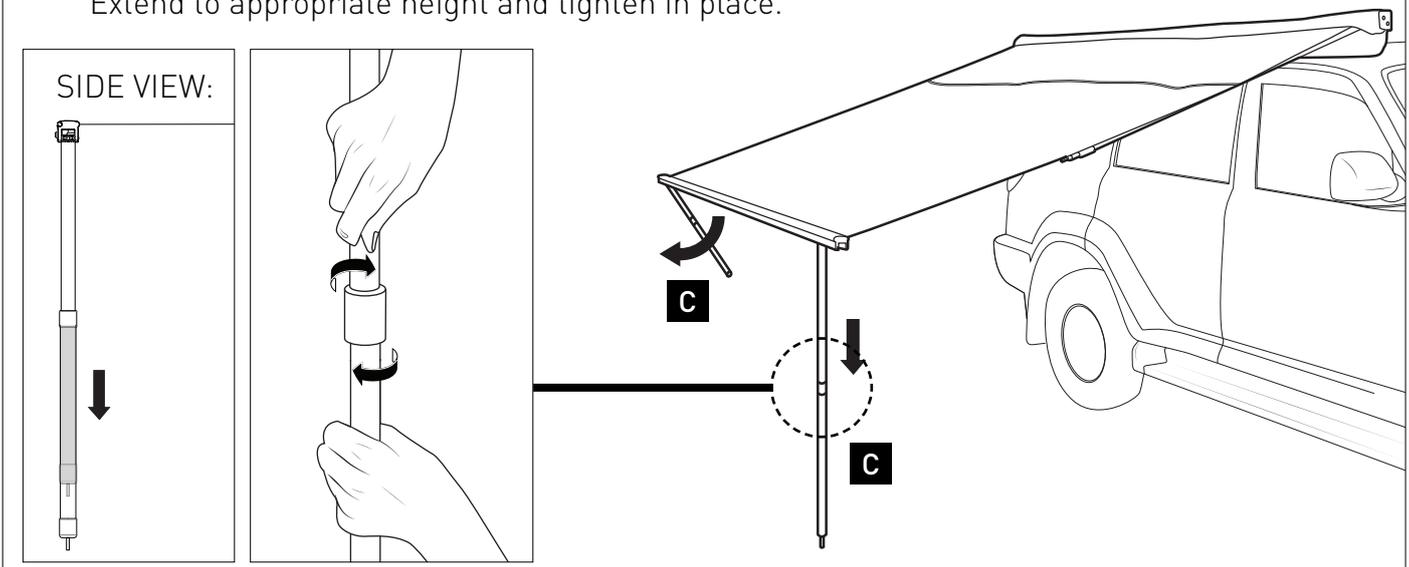


20

Slide **D** Supports into the Front Extrusion.

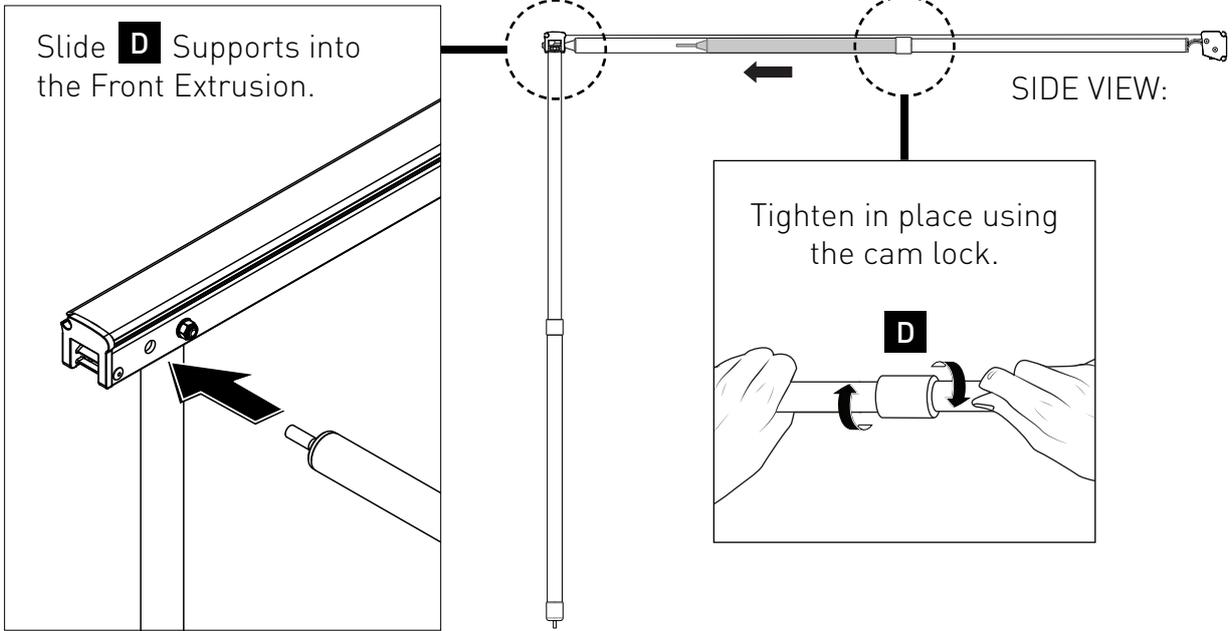


21 Attach the Velcro Straps to **D** Supports



(3 per side)

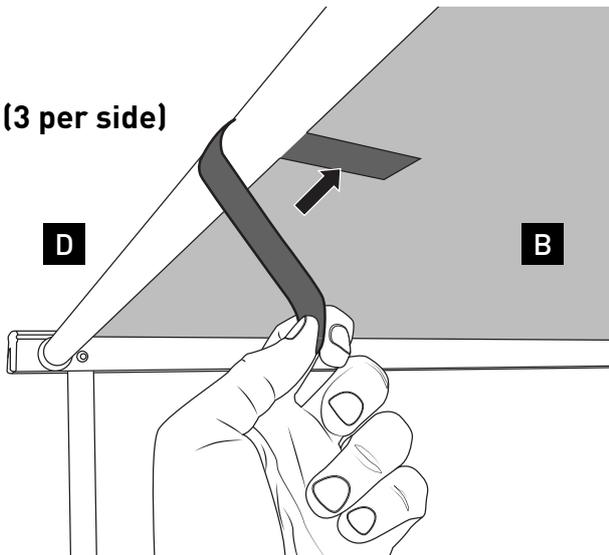

22 Drive the Metal Pegs **E** into suitable ground on either side of the Awning. Hook and tighten Guy Ropes **Q** to secure the Awning in place.

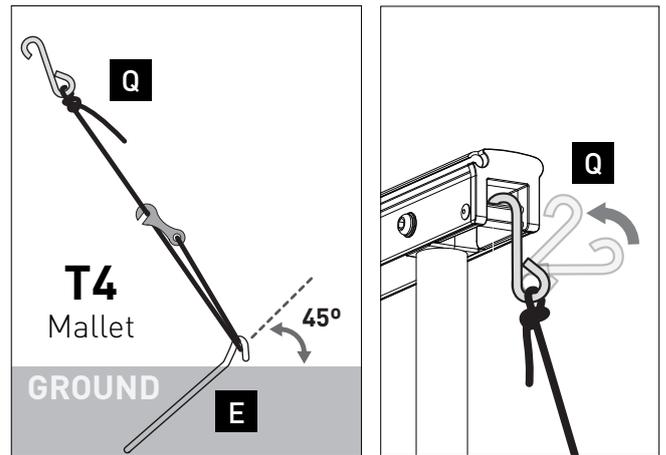




NOTE

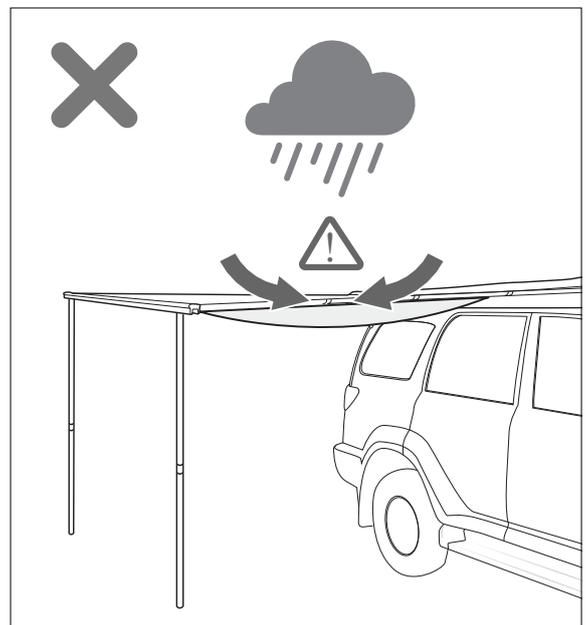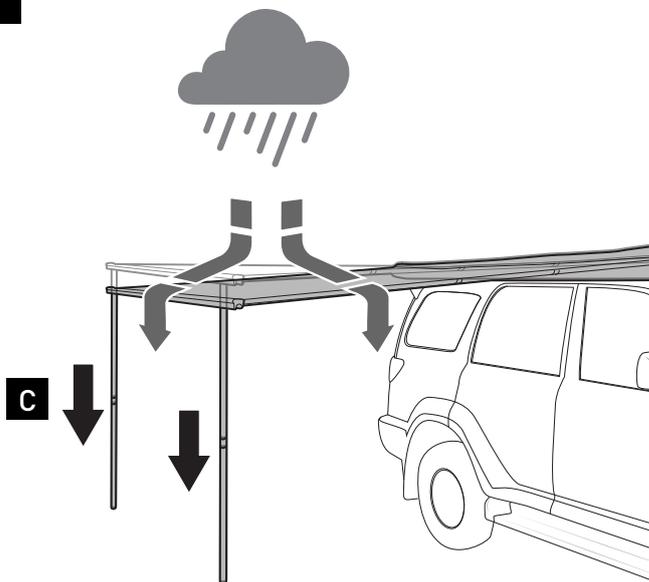

STOWAGE INSTRUCTIONS

(Completion of Steps **17** - **22** in REVERSE order. Use below steps for reference)

- 23** Undo the Hooks, Guy Ropes and Metal Pegs.
Undo the Velcro Straps and swing **D** Supports back toward the main body of the Awning.

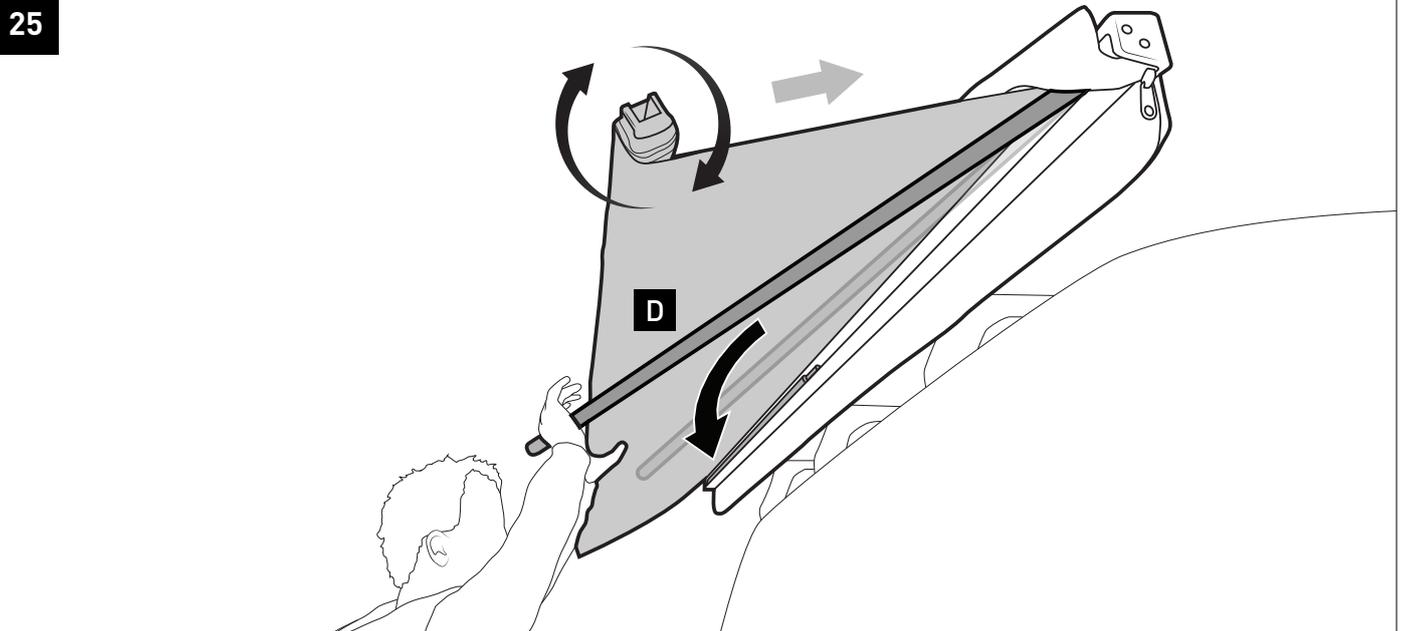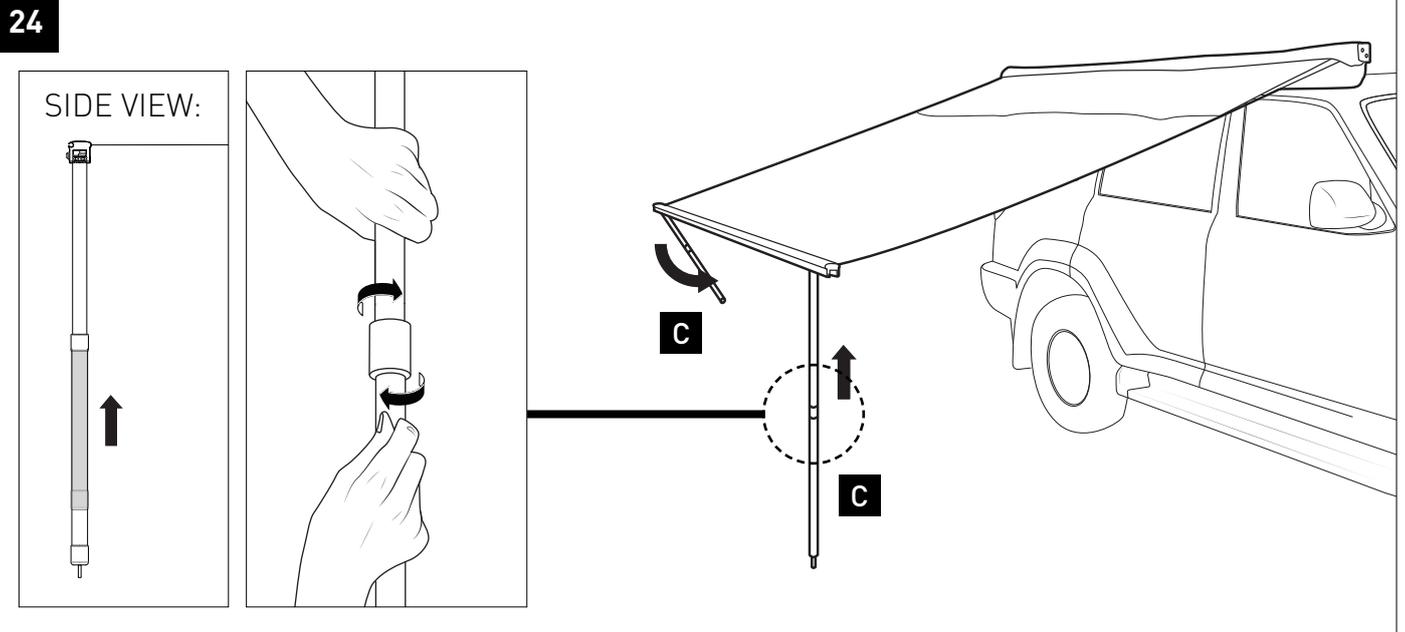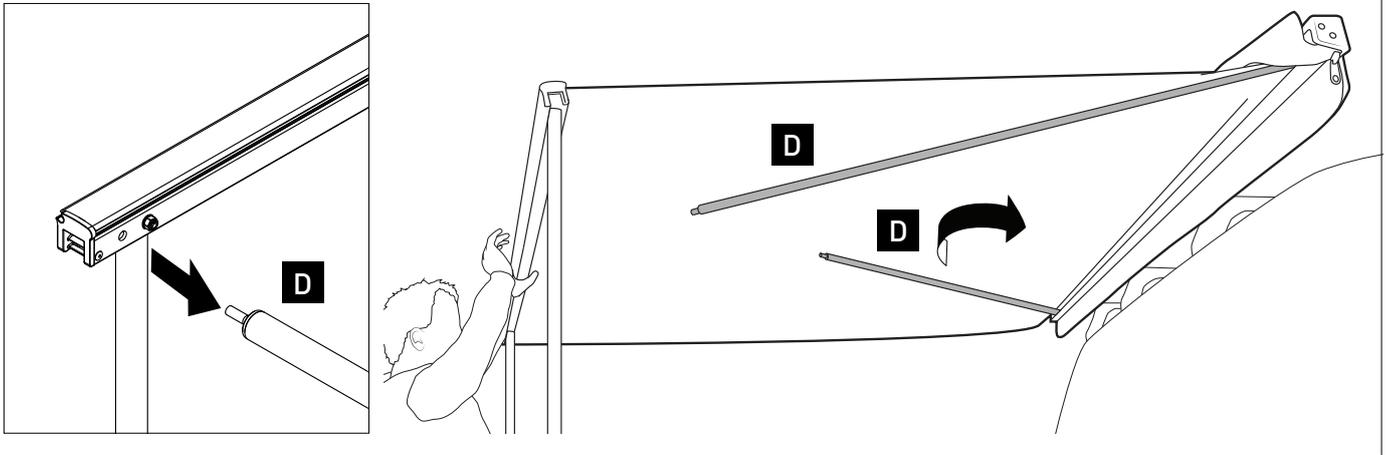

26

NOTE: Metal pegs and Guy ropes should be stowed in the vehicle.

